



STEPPED HOLE ID MEASUREMENT SYSTEM

RF096-15/40-50/70 Series

User's manual

22, Logoisky tract, Minsk
220090, Republic of Belarus
tel/fax: +375 17 281 36 57
info@riftek.com
www.riftek.com



Contents

1.	Safety precautions.....	3
2.	CE compliance.....	3
3.	Laser safety.....	3
4.	General information.....	3
5.	Basic technical data.....	4
6.	Example of item designation when ordering.....	4
7.	Structure and operating principle.....	5
8.	Overall demands for mounting.....	6
9.	Connection.....	6
9.1.	Designation of connector contacts.....	6
9.2.	Cable.....	7
10.	Network setting.....	7
11.	Indended use.....	7
11.1.	Preparation for use.....	7
11.1.1.	Visual inspection.....	7
11.1.2.	Installation and connection.....	7
11.1.3.	Adjustment	7
11.1.4.	Switching the system	7
11.2.	Operating the system.....	8
12.	Service software.....	8
12.1.	General information.....	8
12.2.	System requirements	8
12.3.	SDK library.....	8
12.4.	RF096 Test Program.....	8
12.4.1.	Connection	8
12.4.2.	Calibration	9
12.4.3.	Measurement.....	10
13.	Warranty policy.....	10
14.	List of changes.....	10
15.	Distributors	11

1. Safety precautions

- Use supply voltage and interfaces indicated in the system specifications.
- In connection/disconnection of cables, the system power must be switched off.
- Do not use the system in locations close to powerful light sources.
- The system must be grounded.


2. CE compliance

The system has been developed for use in industry and meets the requirements of the following Directives:

- EU directive 2014/30/EU. Electromagnetic compatibility (EMC).
- EU directive 2011/65/EU, "RoHS" category 9.

3. Laser safety

The system makes use of an c.w. 660 nm wavelength semiconductor laser. The maximum output power is 1 mW. The system belongs to the 2 laser safety class according to IEC/EN 60825-1:2014. The following warning label is placed on the housing:

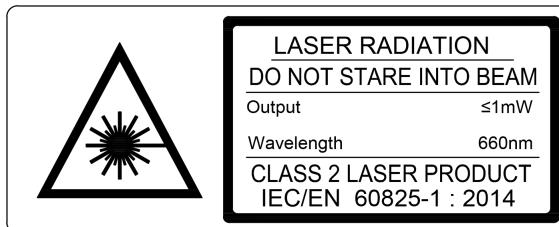

The following safety measures should be taken while operating the system:

- Do not target laser beam to humans.
- Do not disassemble the laser sensor.
- Avoid staring into the laser beam.

4. General information

The system is intended for non-contact scanning and inner diameter measurement of objects having two through-holes of different diameter.

5. Basic technical data

Parameter	Value	
Measurement range (1st hole), mm	15...40	
Measurement range (2nd hole), mm	50...70	
Measurement accuracy (1st hole), mm	±0.02	
Measurement accuracy (2nd hole), mm	±0.005	
Space resolution, points/turnover	6400	
Light source	red semiconductor laser, 660 nm wavelength	
Laser output power, mW	<1	
Laser safety class	2 (IEC60825-1)	
Laser beam shape	Round	
Output interface	Ethernet (UDP)	
Power supply, V	9...24	
Power consumption, W	4 (standby mode), 10 (scan mode)	
Environmental resistance	Vibration	20 g / 10...1000 Hz, 6 hours for each of XYZ axes
	Shock	30 g / 6 ms
	Permissible ambient light, lx	30000
	Relative humidity, %	5-95 (no condensation)
	Operating ambient temperature, °C	0...+45
	Storage temperature, °C	-20...+70
Housing material	aluminum	
Weight (without cable), gram	1500	

NOTE. Technical characteristics of the system can be changed for a specific task.

6. Example of item designation when ordering

RF096-D1min/D1max-D2min/D2max

Symbol	Description
D1min/D1max	ID measurement range (1st hole), mm
D2min/D2max	ID measurement range (2nd hole), mm

Example: RF096-15/40-50/70 – Stepped Hole ID Measurement System, measurement range: 15...40 mm (1st hole), 50...70 mm (2nd hole).

7. Structure and operating principle

Operation of the system is based on the scanning of the hole surface by rotating triangulation laser sensors.


The system contains the two stages measuring head with three laser sensors inside, Figure 1.

The first stage is intended for measurement of holes with 15...40 mm diameters and contains one laser sensor (Figure 1, sensor #1) with the measurement range of 6...21 mm from the head axis.

The second stage is intended for measurement of holes with 50...70 mm diameters and contains two laser sensors (Figure 1, sensors #2 and #3) with shifted and overlapped measurement ranges, 24...31 mm and 30...37 mm from the head axis.

The measuring head is mounted on the rotation module.

Radiation of a semiconductor lasers from the sensors is focused onto the object surface. Radiation reflected by the surface is collected by input lens of the sensors. Rotating laser sensors scan the inner surface of the object, and the system transmits polar coordinates of the surface (distance from the rotation axis measured by the sensors and a corresponding angle of rotation) to the PC for calculating the required geometric parameters.

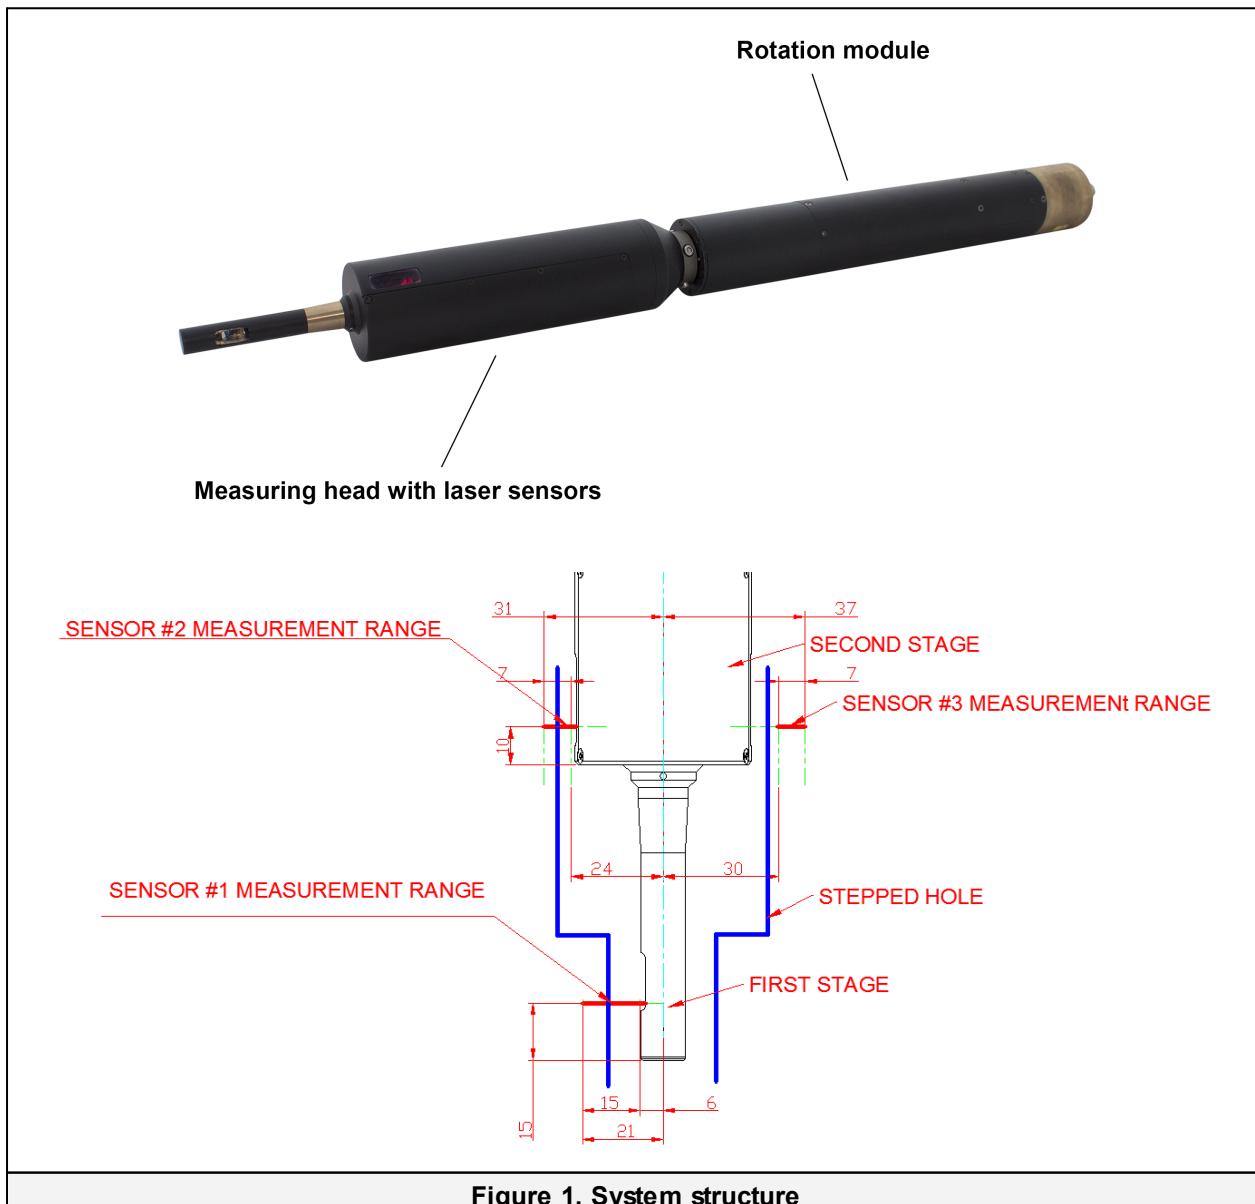



Overall and mounting dimensions of the system are shown in Figure 2.

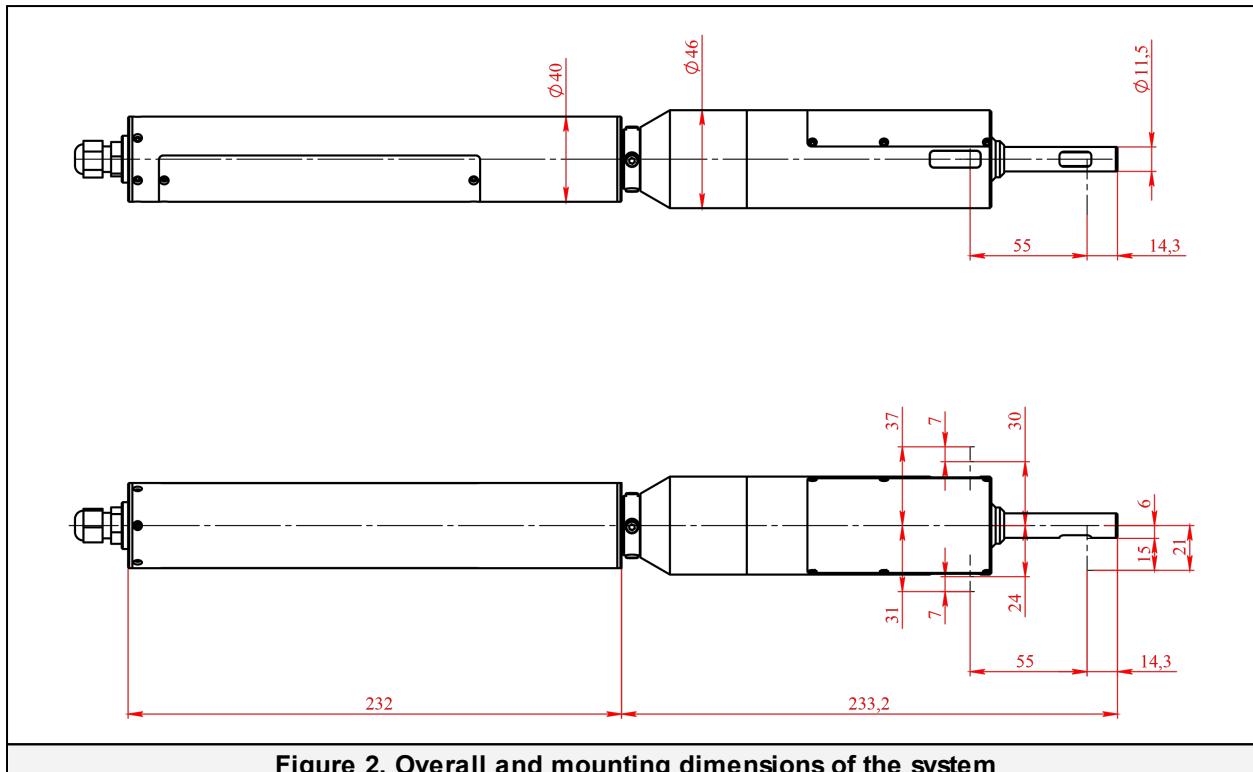


Figure 2. Overall and mounting dimensions of the system

8. Overall demands for mounting

The system is positioned so that the object under control has to be placed within the working range of the system.



ATTENTION!

The system must be grounded – static electricity may cause the failure of electronic components.

9. Connection

9.1. Designation of connector contacts

View from the side of connector contacts used in the system:

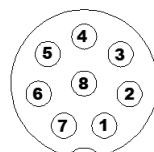


Figure 3. Connector Binder 712 Series, #09-0427-80-08

Designation of contacts is given in the table below:

Pin number	Assignment #09-0427-80-08
1	TX+
2	Power-
3	RX-
4	Power+
5	Power-
6	TX-
7	RX+
8	Power+

9.2. Cable

Designation of cable wires is given in the table below:

Pin number		Assignment #09-0427-80-08	Wire color
RJ-45	1	TX+	White-orange
RJ-45	2	TX-	Orange
RJ-45	3	RX+	White-green
RJ-45	6	RX-	Green
free lead	-	AL (output)	White-blue
free lead	-	Power+	Blue
free lead	-	IN (input)	White-brown
free lead	-	Power-	Brown

10. Network setting

All systems are shipped with the following default network configuration: IP address of the system – 192.168.0.3.

Configure your PC's network card in the next address space: 192.168.0.X. Connect system directly to PC or through network switch.

11. Indended use

11.1. Preparation for use

Preparation of the system includes:

- Visual inspection.
- Installation and connection.
- Adjustment.
- Switching the system.

11.1.1. Visual inspection

Before operating, it is needed to ensure of the serviceability of the equipment:

- Check the system for completeness and absence of damage.
- Check the cable and ground wire.
- Check the condition of output windows and, if necessary, wipe them with a soft cloth.

11.1.2. Installation and connection

- Install the system on a linear translation module (or robot).
- Make the electrical connections in accordance with the cable wires designation.

11.1.3. Adjustment

The system is positioned so that the object under control has to be placed within the working range of the system and on the laser beam axis.

11.1.4. Switching the system

Feed power to the system – 9...24 V.

11.2. Operating the system

The measurement process is fully automated and operation of the system is reduced to the work with the software.

12. Service software

12.1. General information

The service software is intended for:

- Testing and demonstration of the work of the system.
- Setting parameters.
- Calibration.

The service software includes:

- SDK library.
- RF096 Test Program.

12.2. System requirements

- Operating system Windows 7 and later.
- Microsoft Visual C++ Runtime Redistributable for Windows 64-bit. Shipped with the package (you need to run **vcredist_x64.exe**).

12.3. SDK library

SDK contents:

File	Description
rf096017.dll	Dynamic link library.
rf096017.h	C header file. Refer to this file to understand the SDK functions. There is the detailed description for each of them.
rf096017.lib	LIB file to link DLL to the project.

SDK usage scenario:


Step	Description
1	Call <i>rf096017_init()</i> on program start.
2	Call <i>rf096017_connect()</i> to connect to the device. Returns true on success, false on failure.
3	Call <i>rf096017_calibrate()</i> to run the calibration process. Returns true on success, false on failure.
4	Call <i>rf096017_measure()</i> to run the measurement process. Returns true on success, false on failure.
5	Call <i>rf096017_disconnect()</i> to disconnect from the device.
6	Call <i>rf096017_deinit()</i> before your program ends to cleanup the memory allocated by the library.

12.4. RF096 Test Program

12.4.1. Connection

When you run the program, parameters fields (**Device IP Address**, **Remote Port**, **Local Port**) are populated with factory defaults. If you didn't change the system parameters, you can click the **Connect** button in order to connect to the system. Otherwise, change factory defaults to the actual system parameters and then click **Connect**.

9

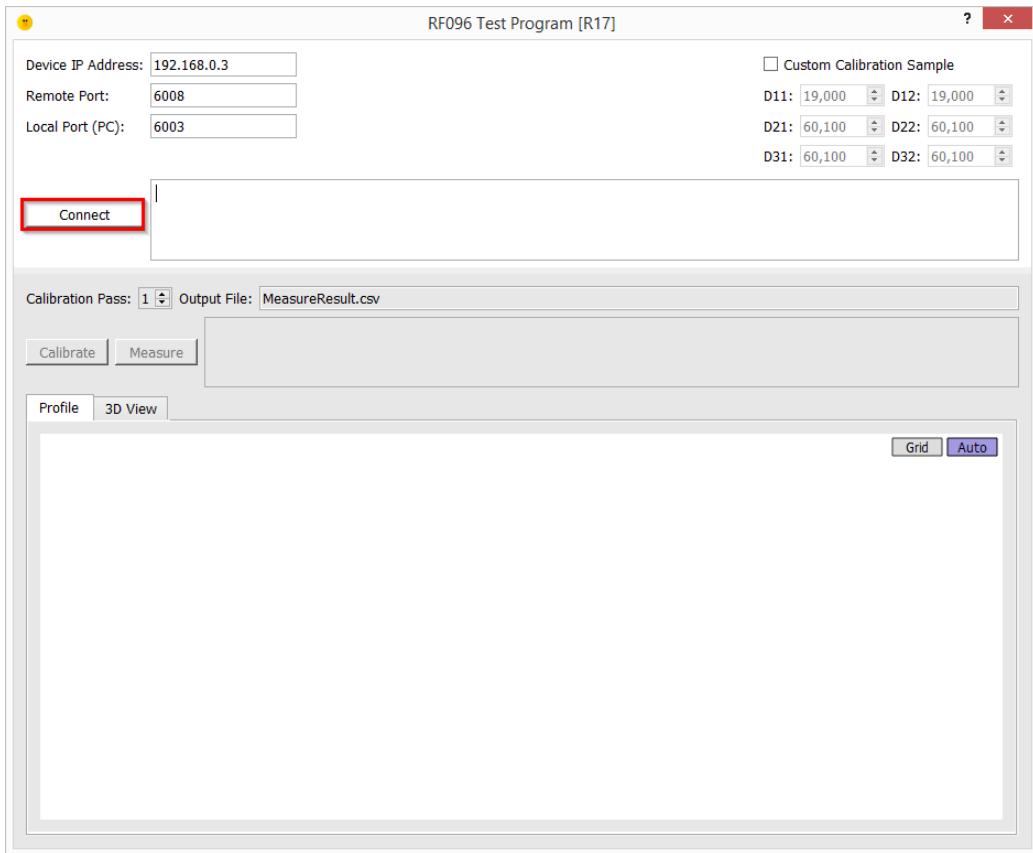

When the connection is established, the system information will be displayed.

12.4.2. Calibration


ATTENTION!

1. It is imperative to perform the calibration procedure before the first use.
2. While using the system, you can repeat the calibration procedure in case of obtaining incorrect results.

The calibration must be done by using three calibration samples supplied with the system.

The calibration procedure:

Step	Description
1	Tick the "Custom Calibration Sample" checkbox and enter the real diameters of the samples (D11, D12 - sample 1; D21, D22 - sample 2; D31, D32 - sample 3): <input checked="" type="checkbox"/> Custom Calibration Sample D11: <input type="text" value="19,000"/> D12: <input type="text" value="19,000"/> D21: <input type="text" value="60,100"/> D22: <input type="text" value="60,100"/> D31: <input type="text" value="60,100"/> D32: <input type="text" value="60,100"/>
2	Install the calibration sample (1) so that a laser sensor (1) was in the center of the sample.
3	Click the Calibrate button in order to run the 1st pass of calibration. Wait until the calibration is complete.
4	Repeat step 3.
5	Install the calibration sample (2) so that a laser sensor (2) was in the center of the sample.
6	Click the Calibrate button in order to run the 2nd pass of calibration. Wait until the calibration is complete.
7	Repeat step 6.

Step	Description
8	Install the calibration sample (3) so that a laser sensor (3) was in the center of the sample.
9	Click the Calibrate button in order to run the 3rd pass of calibration. Wait until the calibration is complete.
10	Repeat step 9.

12.4.3. Measurement

When you have calibrated the system, it's ready to run the measurement.

Click the **Measure** button in order to start the measurement process.

The program will display the calculated values.

You may turn on and off a scale grid by clicking the **Grid** button.

You may zoom and move the image when the **Auto** button is unpressed (shown in gray). To zoom the image, use the mouse wheel. To move the image, press the left mouse key and move the cursor.

10

13. Warranty policy

Warranty assurance for the Stepped Hole ID Measurement System RF096-15/40-50/70 Series - 24 months from the date of putting in operation; warranty shelf-life - 12 months.

14. List of changes

Date	Version	Description
10.01.2018	1.0.0	Starting document.

15. Distributors

AUSTRALIA Applied Measurement Australia Pty Ltd RAILWAY INSTRUMENTS ONLY Thornton Plaza, Unit 5, 27 Thornton Crescent, Mitcham VIC 3132, Australia Tel: +61 39874 5777 Fax: +61 39874 5888 sales@appliedmeasurement.com.au www.appliedmeasurement.com.au	BENELUX Altheris B.V. Vlietweg 17a 2266KA Leidschendam The Netherlands Tel: +31 70 3924421 Fax: +31 70 3644249 sales@altheris.nl www.altheris.com	BULGARIA, HUNGARY RMT Ltd. R Zahradni 224 739 21 Paskov, Czech Republic Tel: +420 558640211 Fax: +420 558640218 rmt@rmt.cz www.rmt.cz
BRAZIL CAPI Controle e Automação Ltda Rua Itororó, 121, CEP 13466-240 Americana-SP, Brazil Tel: +55 19 36047068 Fax: +55 19 34681791 capi@capicontrole.com.br www.capicontrole.com.br	CHILE Verne SpA Apoquindo 2818, oficina 31, Las Condes, Santiago, Chile Tel: +56 2 228858633 info@verne.cl jsaavedra@verne.cl www.verne.cl	CHINA Zhenshangyou Technologies Co.,Ltd. Rm 2205-2210, Zhongyou Hotel 1110 Nanshan Road, Nanshan District 518054 Shenzhen, China Tel: +86 755-26528100/8011/8012 Fax: +86 755-26528210/26435640 info@51sensors.com www.51sensors.com
CHINA Shanghai micron-metrology com., Ltd. Room 602 unit 4, lane 399, Mudan road, Pudong New district Shanghai, China Tel: +86-21-68416510 sales@micron-metrology.cn www.micron-metrology.cn	CHINA JRKtech Co., Ltd. 1F, Building 9, 100 Xianlie Rd., Guangzhou, China Tel: +86 755 85267190/ +86 15989362481 Fax: + 86 755 85267190 shengz_k@163.com www.jrktech.com	CZECH REPUBLIC RMT Ltd. Zahradni 224 739 21 Paskov, Czech Republic Tel: +420 558640211 Fax: +420 558640218 rmt@rmt.cz www.rmt.cz
FINLAND TERÄSPYÖRÄ-STEELWHEEL OY RAILWAY INSTRUMENTS ONLY Juvan teollisuuskatu 28 FI-02920 ESPOO, Finland Tel: +358 400 422 900 Fax: +358 9 2511 5510 steelwheel@steelwheel.fi www.teraspyora.fi	FRANCE DB Innovation (ALTHERIS France) 26, avenue de la Mediterranee 34110 Frontignan France Tel: +33-467786166 Fax: +33-467740134 dbi@altheris.fr www.altheris.fr	GERMANY Disynet GmbH Breyeller Str. 2 41379, Brueggen Tel: +49 2157 8799-0 Fax: +49 2157 8799-22 disynet@sensoren.de www.sensoren.de
GERMANY BIP-Industrietechnik GmbH RAILWAY INSTRUMENTS ONLY Am Elisabethhof 22, D-14772 Brandenburg D-41379 Brueggen, Germany Tel: +49 (0) 33 81 75 90 0 Fax: +49 (0) 33 81 75 90 11 info@bip-industrie.de www.bip-industrietechnik.de	GERMANY Finger GmbH & Co. KG OPTICAL MICROMETERS ONLY Sapelloh 172, 31606 Warmen, Germany Tel: +49 5767 96020 Fax: +49 5767 93004 finger@finger-kg.de www.finger-kg.de	GERMANY Hylewicz CNC-Technik SHTRIKH-2 ONLY Siemensstrasse 13-15, 47608 Geldern, Germany Tel: +49 2831 91021-20 Fax: +49 2831 91021-99 info@cnc-step.de www.cnc-step.de



INDIA	INDIA	INDONESIA
<p>Pragathi Solutions #698, 5th Main, 8th Cross, HAL 3rd Stage, New Tippasandra Road, Bangalore, 560075, India Tel: +91 80 32973388 Tel/fax: +91 80 25293985 Mobile: +91 9448030426/ +919448492380 sales@pragathisolutions.in arghya@pragathisolutions.in www.pragathisolutions.in</p>	<p>BPI (India) RAILWAY INSTRUMENTS ONLY 63,Civil Lines, Near Bhagirathi Colony, Roorkee, 247667, India Tel: +91 1332274743 Tel: +91 9319686784 sales@bpi-india.in www.bpi-india.in</p>	<p>PT. DHAYA BASWARA SANIYASA Botanic Junction Blok H-9 NO. 7 Mega Kebon Jeruk, Joglo Jakarta 11640, Indonesia Tel: + 62 21 29325859 management@ptdbs.co.id</p>
IRAN	ISRAEL	ITALY
<p>Novin Industrial Development Grp. Tel: +98 21 44022093-6 Fax: +98 21 43858794 Mobile: +98 9123207518 info@novnid.com www.novnid.com</p>	<p>Nisso Dekalo Import Export LTD 1 David Hamelech Street Herzlia 46661 Israel Tel: +972-99577888 Fax: +972-99568860 eli@fly-supply.net www.fly-supply.net www.aircraft-partsupply.com</p>	<p>FAE s.r.l. Via Tertulliano, 41 20137 Milano, Italy Tel: +39-02-55187133 Fax: +39-02-55187399 fao@fae.it www.fae.it</p>
LATVIA, ESTONIA	MALAYSIA	NORWAY
<p>SIA "SOLARTEX" RAILWAY INSTRUMENTS ONLY Duntes 15a, 5th floor, office B7 Riga, Latvia Tel.: +371 67 130 787 solartex@inbox.lv</p>	<p>OptoCom Eqiptech (M) Sdn Bhd H-49-2, Jalan 5, Cosmoplex Industrial Park, Bandar Baru Salak Tinggi, Sepang, Malaysia Tel: 603 8706 6806 Fax: 603 8706 6809 optocom@tm.net.my www.optocom.com.my</p>	<p>Salitec AS PB 468, N-1327 Lysaker Tel.: +47 23 891015 Fax: +47 92101005 mail@salitec.no www.salitec.no</p>
PERU	POLAND	PORTUGAL
<p>Verne Perú S.A.C. Las Codornices 104, Surquillo, Lima, Peru Tel/fax: +51 992436734 info@verne.cl www.verne.cl</p>	<p>MTL ASCO Sp. z o.o. RAILWAY INSTRUMENTS ONLY ul. Wielowiejska 53 44-120 PYSKOWICE (k/ GLIWIC), Poland Tel: + 48 32 230 45 70 Fax: + 48 32 332 70 14 rail@ascorail.eu www.ascorail.eu</p>	<p>UltraSens Qt. da Portela, Lt. 22.1, Ap. 152 3030 - 502 Coimbra, Portugal Phone +351 239 796 277 Fax: +351 239 918 267 info@ultrasens.com www.ultrasens.com</p>
RUSSIA	RUSSIA	SERBIA, SLOVAKIA
<p>Sensorika-M LLC Dmitrovskoye shosse 64-4 127474, Moscow, Russia Tel: +7 499 487 0363 Fax: +7 499 487 7460 info@sensorka.com www.sensorka.com</p>	<p>Diesel-test-Komplekt LLC 620030, Karjernaya St, 16 Ekaterinburg, Russia Tel/fax: +7 343 2227565 Tel/fax: +7 343 2227370 mail@d-test.ru www.d-test.ru</p>	<p>RMT Ltd. Zahradni 224 739 21 Paskov, Czech Republic Tel: +420 558640211 Fax: +420 558640218 rmt@rmt.cz www.rmt.cz</p>

SOUTH AFRICA Ratcom Enterprise Pty Ltd CSIR BUILDING 35, Office 78 Meiring Naude Road, Brummeria Pretoria, 0084 South Africa Tel: + 27 12 841 2032 Fax: + 27 86 225 0650 info@ratcom.co.za www.ratcom.co.za	SOUTH KOREA PROSEN. CO., LTD M-1001, Songdo techno park IT center, 32, Songdogwahak-ro, Yeonsu-gu, Incheon, 21984, Republic of Korea Tel: +82-32-811-3457 Fax: +82-32-232-7458 trade@prosen.co.kr www.prosen.co.kr	SPAIN Iberfluid Instruments S.A. C/ Botanica, 122 08908 L'Hospitalet de Llobregat, Barcelona Tel: +34 93 447 10 65 Fax: +34 93 334 05 24 myct@iberfluid.com www.iberfluid.com
SWITZERLAND ID&T GmbH Gewerbestrasse 12/a 8132 Egg (Zurich), Switzerland Tel: + 41 44 994 92 32 Fax: + 41 44 994 92 34 info@idtlaser.com www.idtlaser.com	SWEDEN, DENMARK BLConsult Ryssbält 294, 95 291 KALIX, Sweden Mobile: +46 70 663 19 25 info@blconsult.se www.blconsult.se	THAILAND Advantech Solution Co.,Ltd. 20/170 Motorway Rd., Kwang Pravet, Khet Pravet, Bangkok, Thailand 10250 Tel: +662-1848705 Fax: +662-1848708 sales@advantechsolution.com www.advantechsolution.com
TURKEY TEKMA Mühendislik A.S. Cevizli Mh. M. Kemal Cd., Hukukçular Towers, A-Blok, No: 66-A/39 Kartal – İstanbul Tel: +90 216 970 1318 Tel: +90 850 840 2334 info@tekma.eu www.tekma.eu	UKRAINE KODA Frunze st 22 61002, Harkov, Ukraine Tel/fax: +38 057 714 26 54 mail@koda.com.ua www.koda.com.ua	UNITED KINGDOM, IRELAND Ixthus Instrumentation Ltd The Stables, Williams' Barns Tiffield road, Towcester, Northants Tel: +44 1327 353437 Fax: +44 1327 353564 info@ixthus.co.uk www.ixthus.co.uk
USA, CANADA, MEXICO International Electronic Machines Corporation RAILWAY INSTRUMENTS ONLY 850 River Street, Troy, New York, USA Tel: +1 518 268-1636 Fax: +1 518 268-1639 marketing@iem.net wwwием.net	USA, CANADA, MEXICO Acuity Products of Schmitt Industries, Inc. 2765 NW Nicolai Street Portland, OR, 97210, USA Tel: +1 503 227 7908 Fax: +1 503 223 1258 sales@acuitylaser.com www.acuitylaser.com	