



RIFTEK
Sensors & Instruments



PIPE INNER DIAMETER MEASUREMENT MACHINE

RF096-32/42-80 Series

User's Manual

www.riftek.com
info@riftek.com

Certified according to ISO 9001:2015

Contents

1.	Safety precautions.....	3
2.	CE compliance.....	3
3.	Laser safety.....	3
4.	General information.....	3
5.	Basic technical data.....	4
6.	Example of item designation when ordering.....	4
7.	Structure and operational principle.....	4
8.	Connection	5
9.	Network setting.....	5
10.	Service program.....	6
10.1.	System requirements.....	6
10.2.	Installation.....	6
10.3.	License activation.....	7
10.4.	Pipe Check.....	7
10.4.1.	Main window.....	7
10.4.2.	Calibration.....	8
10.4.3.	Measurement procedure.....	9
10.4.4.	Templates settings.....	10
10.4.5.	Log	13
11.	Troubleshooting.....	13
12.	Technical support.....	13
13.	Warranty policy.....	13
14.	Distributors	14

1. Safety precautions

- Use supply voltage and interfaces indicated in the machine specifications.
- In connection/disconnection of cables, the machine power must be switched off.
- Do not use the machine in locations close to powerful light sources.
- To obtain stable results, wait about 20 minutes after the machine activation to achieve uniform warm-up of the laser sensor.

2. CE compliance


3

The machine has been developed for use in industry and meets the requirements of the following Directives:

- EU directive 2014/30/EU. Electromagnetic compatibility (EMC).
- EU directive 2011/65/EU, "RoHS" category 9.

3. Laser safety

The laser sensor of the system makes use of a c.w. 660 nm wavelength semiconductor laser. Maximum output power is 1 mW. The sensor belongs to the 2 laser safety class. The following warning label is placed on the housing:

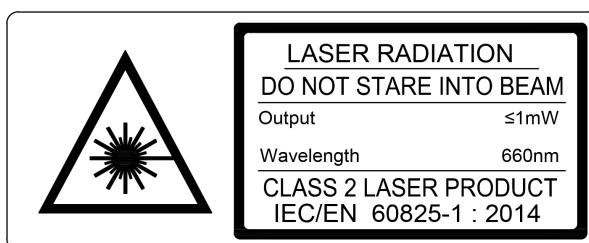

The following safety measures should be taken while operating the sensor:

- Do not target laser beam to humans.
- Do not disassemble the sensor.
- Avoid staring into the laser beam.

4. General information

The machine is designed for contactless scanning and geometrical parameters measurement of inner diameter of pipes, bushes, holes, tubes, and so on.

Field of application: large-scale production.

5. Basic technical data

Parameter	Value
Diameter measurement range, mm	32...42
Diameter measurement accuracy, μm	± 5
Depth of measured hole, mm	≤ 80
Linear translation accuracy, μm	± 20
Quantity of measured sections	not limited, programmable
Light source	red semiconductor laser, 660 nm wavelength
Laser sensor output power, mW	<1
Laser safety class	2 (IEC60825-1)
Output interface	Ethernet
Power supply	220 V AC
Environmental resistance	Vibration
	20 g / 10...1000 Hz, 6 hours for each of XYZ axes
	Shock
	30 g / 6 ms
	Permissible ambient light, lx
	30000
Operating ambient temperature, °C	Relative humidity, %
	5-95 (no condensation)
Storage temperature, °C	0...+45
	-20...+70
Housing material	aluminum

Note: machine parameters can be changed for a specific task.

6. Example of item designation when ordering

RF096-Dmin/Dmax-L

Symbol	Description
Dmin/Dmax	ID measurement range, mm.
L	Hole depth, mm.

Example: RF096-32/42-80 – Pipe Inner Diameter Measurement Machine RF096, diameter measurement range - 32...42 mm, depth of measurement - 80 mm.

7. Structure and operational principle

Operation of the machine is based on the principle of laser scanning of rotating pipe inner surface by triangulation laser point sensor.

Structure of the machine is shown in Figure 1.

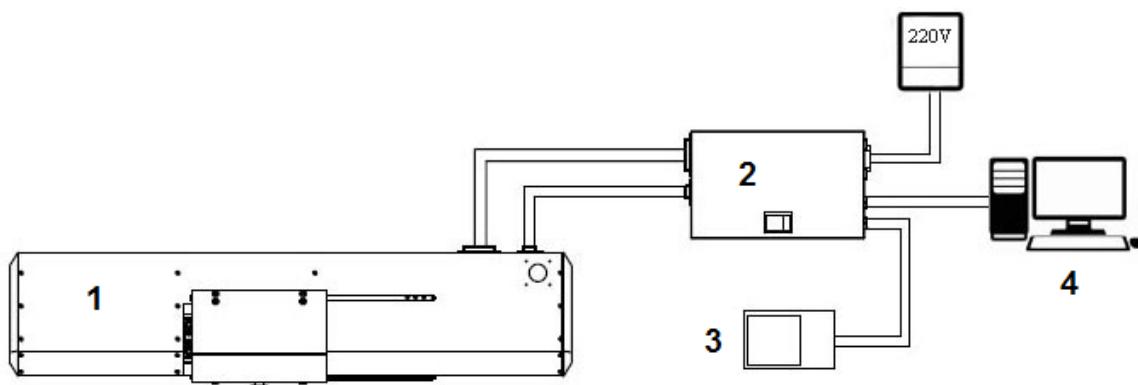


Figure 1.

where:

- 1 - measurement module,
- 2 - controller with the power supply,
- 3 - foot switch,
- 4 - personal computer with a service program.

The measurement module structural design is illustrated in Figure 2.

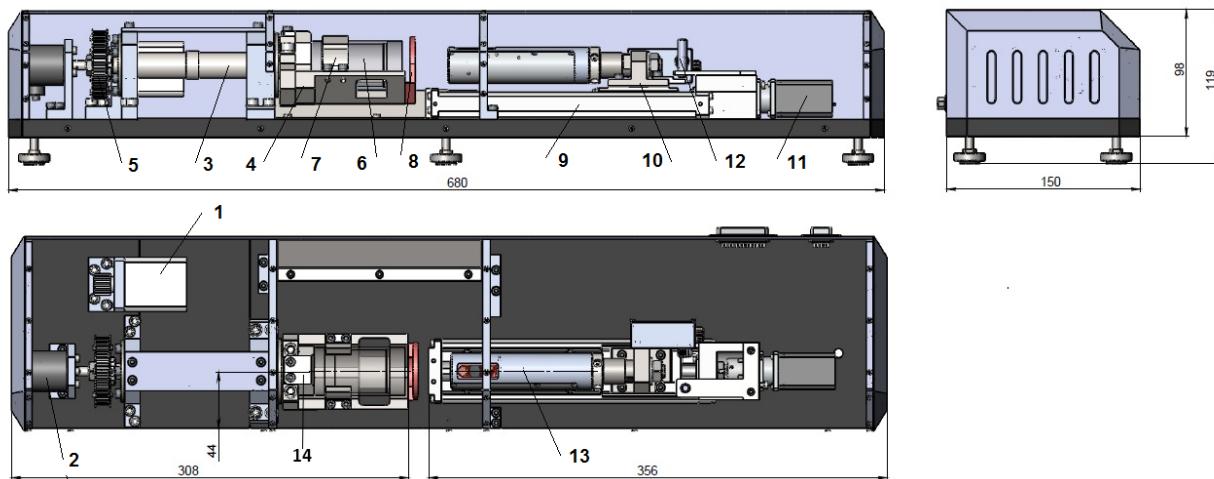


Figure 2.

The measurement module includes a base, on which the rotation mechanism and the linear movement mechanism are installed. The housing of the measurement module is equipped with a signal tower (not shown).

The rotation mechanism includes a stepper motor (1), encoder (2), shaft (3) with a V-block (4). The transmission of rotation from the stepper motor (1) to the shaft (3) is carried out by means of a belt drive (5). The V-block (4) is intended to install the controlled pipe (6) and has two plate springs (7), which intended for holding the pipe on the V-block, and a calibration ring (8). The pipe must be pressed to the thrust plate (14).

The linear movement mechanism includes guide rails (9), carriage (10), stepper motor (11), end switch (12). The carriage (10) is moved by a ball screw, and carries a laser triangulation sensor (13).

The machine operates as follows:

The operator installs the controlled pipe (6) into the V-block (4). On the operator's command, a laser sensor (13) moves into the control zone of the calibration ring (8), and the V-block (4) is driven to rotate. During rotation, a laser sensor measures the distance to the surface of the ring in synchronization with the angle of rotation determined by the encoder (2). Upon completion of one turn of the V-block, a laser sensor moves to the next control position, and the measurement process is repeated. The number of diameter control sections along the pipe is defined by the software.

Radial coordinates of the calibration ring surface and controlled pipe are transmitted to the PC for calculating the required geometric parameters.

8. Connection

Make connections in accordance to block diagram shown in [Figure 1](#). Connect measurement module to controller by means of two cables (Ethernet and Power supply). Connect foot switch to controller. Connect controller to PC and to 220 V AC.

9. Network setting

The machine is shipped with the following default network configuration: IP address of the machine – 192.168.1.3.

Configure your PC's network card in the following address space: 192.168.1.X. Connect the machine directly to your PC or through the network switch.

10. Service program

In order to work with the machine, you need to [install](#) the RFClearView software, and to [activate](#) the license.

10.1. System requirements

The main requirements for using RFClearView:

- Operating system Windows 7 and later.
- Video card and video card drivers, which support OpenGL 2.1 and later.

10.2. Installation

6

Before starting the installation, read the following information.

The RFClearView software comes in two versions – 64 and 32 bits. To determine a correct version, refer to the System Properties window or to your system administrator.

Setup files for each version exist in two implementations:

- Standalone setup file (**RFClearViewSetup_offline.exe**) contains a version of RFClearView on the date of the setup file creation.
- Setup file via the internet (**RFClearViewSetup_online.exe**) will download and install the latest version of RFClearView.

Download links of the latest versions:

Windows x64:

https://riftek.com/media/rit/repos/installers/RFClearViewSetup_online_x64.exe

https://riftek.com/media/rit/repos/installers/RFClearViewSetup_offline_x64.exe

Windows x32:

https://riftek.com/media/rit/repos/installers/RFClearViewSetup_online.exe


https://riftek.com/media/rit/repos/installers/RFClearViewSetup_offline.exe

The installation is performed by the specially created installer.

To start the installation, you need to run the setup file

RFClearViewSetup_online.exe/RFClearViewSetup_offline.exe.

When you run the installation, Welcome Window appears:

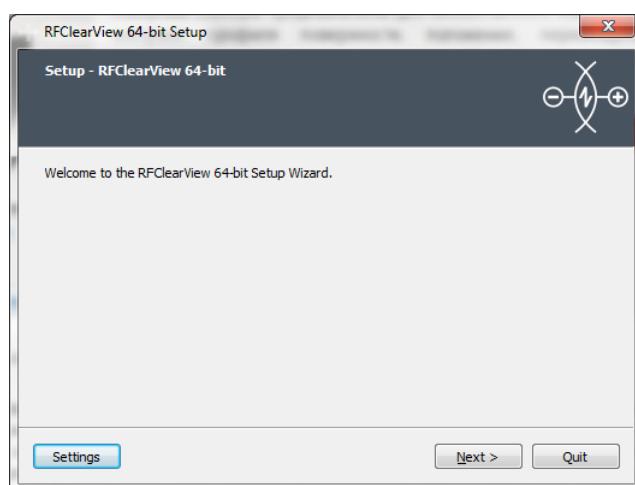


To continue with the installation, click **Next**.

Follow the guidelines in dialog boxes of the installer.

10.3. License activation

In order to activate the license, click  in the upper right corner of the program window, go to the **About** tab, and click the link with the license type name. The activation window appears:

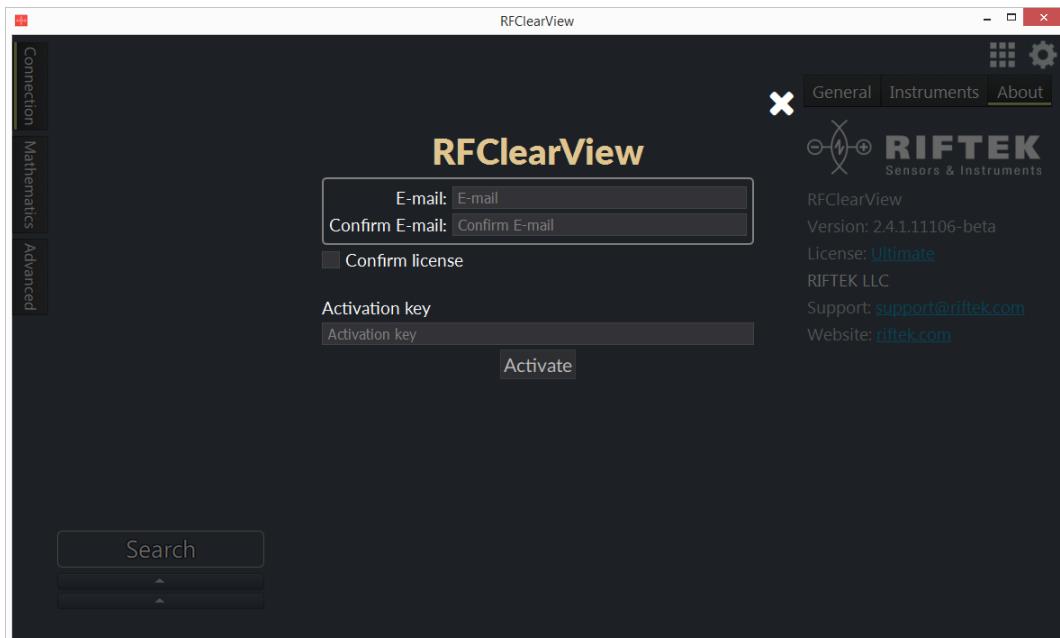


Next, enter your email and confirm it, select **Confirm license**, enter the activation key, and click **Activate**.

10.4. Pipe Check


10.4.1. Main window

Run RFClearView, click on the sign  located on the upper right corner of the program window, and select **Pipe Check**:

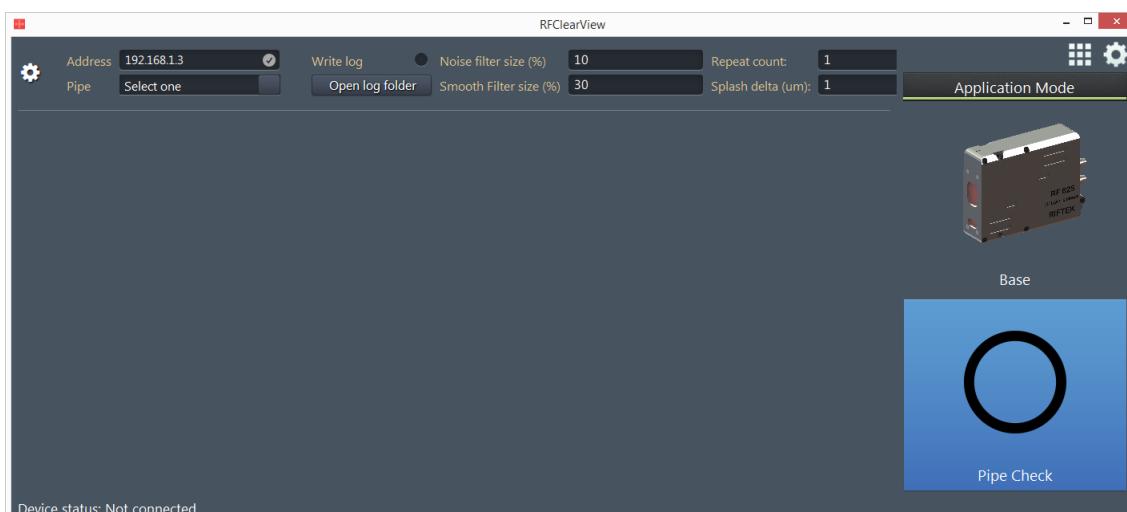

The selected program will be highlighted in blue. To hide the **Application Mode** panel and to expand **Pipe Check** on the entire window, click  again.

The main window:

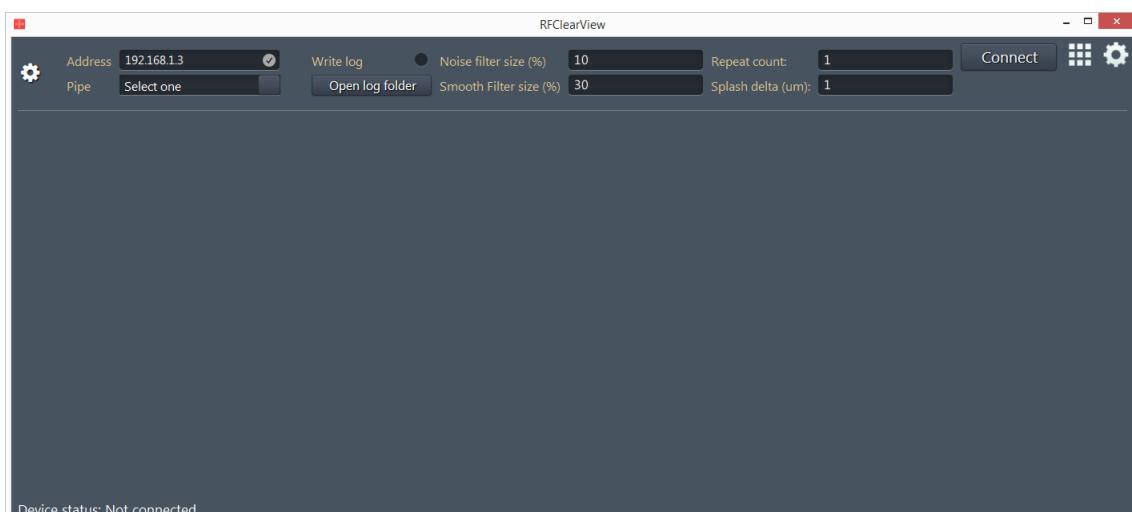

The main window description:

Address	TCP/IP address of the machine. Note: the machine and your PC must be in the same subnet.
Pipe	Pipe type selection.
Write log	Write log option.
Open log folder	Open the folder with log files.
Noise filter size (%)	10% by default.
Smooth filter size (%)	30% by default.
Repeat count	Number of intermediate positions for one position.
Splash delta (µm)	Distance between intermediate positions.
Connect	Connect to the machine.
Start	Start the measurement.
Stop	Stop the measurement.
Disconnect	Disconnect from the machine.
Calibrate	Calibrate the machine.
	Settings (calibration and templates).

10.4.2. Calibration




Attention!

The machine must be calibrated by using the calibration pipe every time when you switch it on.

To perform the calibration procedure, follow the steps below:

- Insert the calibration pipe into the V-block.
- Go to the main window.
- Select **Calibration** from a drop-down list:




- Connect to the machine - click **Connect**.
- Start the calibration process - click **Calibrate**.
- Wait until the calibration is complete.

Calibration settings can be changed. Click **Disconnect**, then click  on the left side of the main window, and go to the **Calibration** tab.

The **Calibration** tab:

9

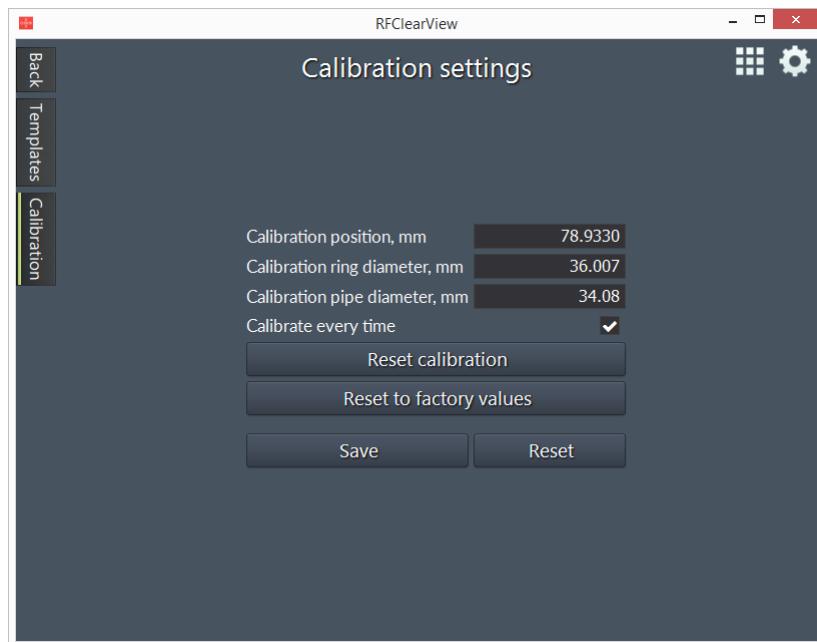

You can use the default calibration parameters or set them manually (if necessary).

If you have changed the parameter value and did not click **Save** yet, you can reset this change by clicking the **Reset** button.

To restore the default values of all calibration parameters, click **Reset to factory values**.

The calibration by using the calibration pipe is necessary. Optionally, you can also calibrate the machine by calibration ring. Options **Reset calibration** and **Calibrate every time** are applied only to the calibration by ring. In case of the calibration error, click **Reset calibration**. To calibrate the machine by ring every time before measurement, select the **Calibrate every time** option.

To save the changes, click **Save**.

Click **Back** to return to the main window.

Note. Do not click **Back** and **Templates** before you have saved calibration settings, because in this case all changes will be reset.

10.4.3. Measurement procedure


Once the system has been calibrated by using the calibration pipe, it's ready to work. To perform the measurement, follow the steps below:

1. Select the pipe from the **Pipe** drop-down list (how to create pipe descriptions, see Par. [10.4.4.](#)).
2. Select the **Write log** option (if necessary).
3. Click **Connect**.
4. Insert the pipe into the V-block (the pipe must be pressed to the thrust plate).
5. Click **Start** (or press the foot switch).



When you click **Stop** during the measurement process and then click **Start** again, the measurement will be repeated from the beginning.

Upon completion of the measurement process, a signal tower blinks green or red (depending on the final result: green – success, red – fail), and the program displays the measurement results as shown on the screenshot below:

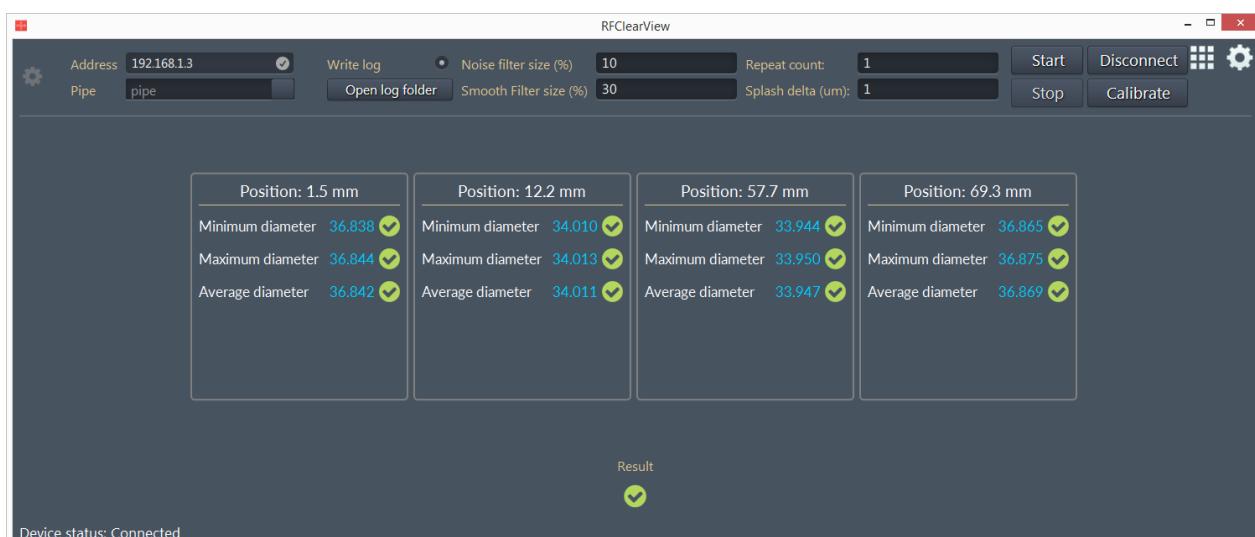

Pass ✓ - measurement results are within the tolerances.

Fail ✗ - measurement results are beyond the tolerances.

The final result is shown below the tables (**Result**).

Take note that the final result can be **Pass** or **Fail** depending on the following:

Minimum diameter	Maximum diameter	Average diameter	Result
Fail	Fail	Fail	Fail
Fail	Fail	Pass	Fail
Fail	Pass	Fail	Fail
Fail	Pass	Pass	Fail
Pass	Fail	Fail	Fail
Pass	Pass	Fail	Pass
Pass	Fail	Pass	Pass
Pass	Pass	Pass	Pass

Next, if you intend to measure pipes of the same type, change the pipe in the V-block (see step 4), and click **Start**.

If you want to change the pipe type, it is necessary to disconnect from the device (click **Disconnect**), and to follow steps 1-5.


If you want to change settings, it is necessary to disconnect from the device (click **Disconnect**), and to click  on the left side of the main window.

10.4.4. Templates settings


Click  on the left side of the main window.

When there are no saved pipe descriptions in the program, the program prompts to create one:


11

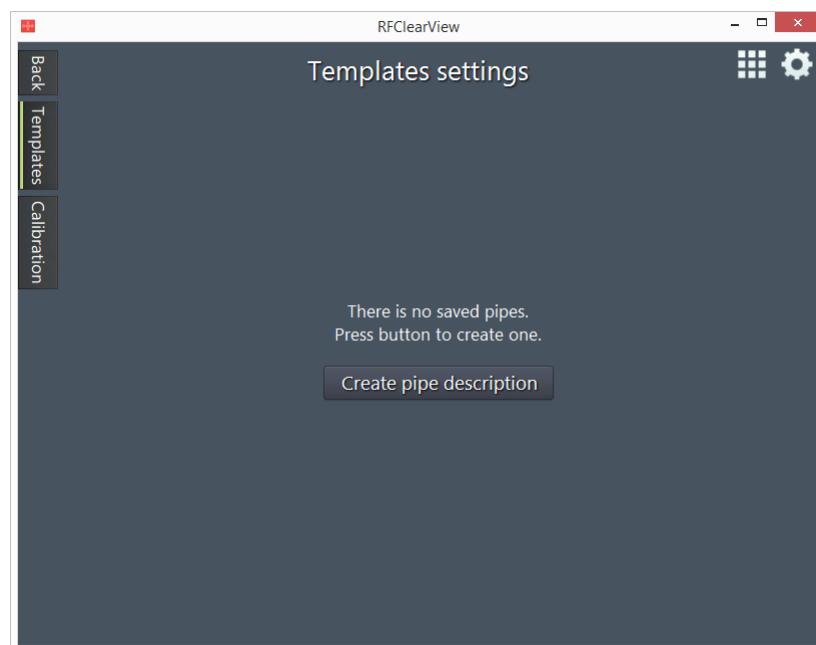

Click **Create pipe description**, enter the name into the **Pipe name** field, and click **Ok**.

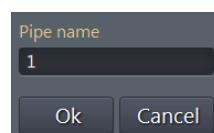


When the pipe description is created, it is necessary to add the measurement positions and to set tolerances for each of them.

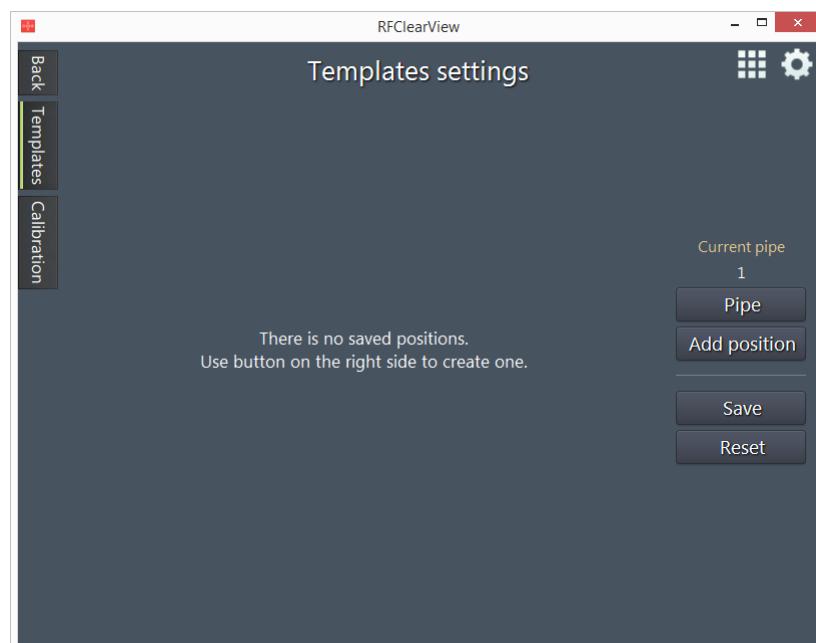

For every pipe you must set at least one measurement position. To add the measurement position, click **Add position**.

12

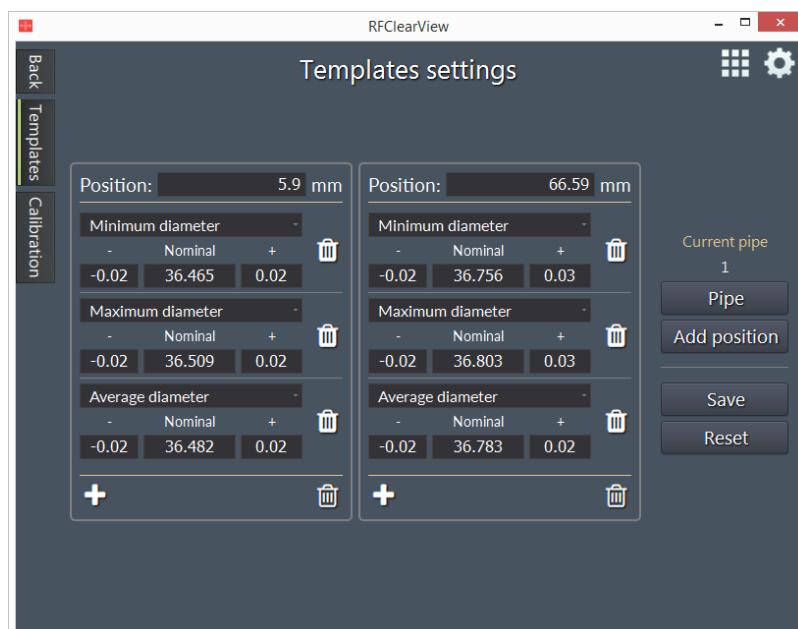

Next, it is necessary to set parameters for every position:

- Measurement position: the **Position** field (mm)
- Tolerances: Minimum, Maximum and Average diameter (mm)

It is necessary to set tolerances (-/+) and a nominal value (the **Nominal** field) for the selected diameter type (minimum/maximun/average):



To remove the tolerances, you need to click  next to the ones you want to remove.


To add the new tolerances, you need to click .

To remove the position, click  in the bottom part of the position area.

When you have set all parameters, click **Save** to save the pipe description.

Note. Do not click **Back** and **Calibration** before you have saved the pipe description, because in this case all changes will be reset.

If you want to create a new pipe description, click **Pipe** > **Add pipe**, enter the name into the **Pipe name** field, and click **Ok**.

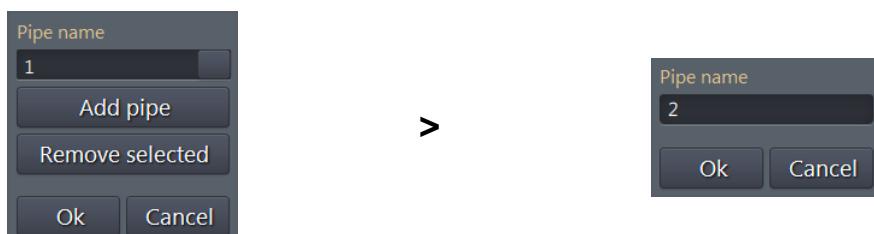

If you want to remove the pipe description, click **Pipe**, select one from the list, click **Remove selected**, and confirm the action.




To pass to another pipe, click **Pipe**, select one from the list, and click **Ok**.

When you have set all parameters and saved the pipe description, click **Back** to return to the main window in order to start the measurement.

10.4.5. Log

To save results to the log files (CSV), select the **Write log** option. To open the log folder, use the special button:



You can select the **Write log** option only when the device is not connected in the program.

13

11. Troubleshooting

Problem	Cause	Solution
You can not connect to the device in the program	Device is turned off	Make sure that the device is turned on (red button on the controller).
	Power supply	Check the power supply.
	Cables	Make sure that all cables are connected properly.
	Subnet conflict	Check network settings. The device and your PC must be in the one subnet.
Incorrect results	Calibration error	Check calibration parameters . Recalibrate the machine by using the calibration pipe.
No log files	Program settings	Make sure that the Write log option is enabled.

12. Technical support

Technical assistance, related to incorrect work of the device and to problems with the service program, is free. Requests for technical assistance should be addressed to support@riftek.com.

When contacting technical support, please provide the detailed description of the problem.

13. Warranty policy

Warranty assurance for the Pipe Inner Diameter Measurement Machine RF096-32/42-80 Series – 24 months from the date of putting in operation; warranty shelf-life – 12 months.

Warranty repair is not provided in the case of incorrect connection or mechanical damage, including opening the housing.

14. Distributors

AUSTRALIA

Applied Measurement Australia Pty Ltd
RAILWAY INSTRUMENTS ONLY
 Thornton Plaza, Unit 5,
 27 Thornton Crescent, Mitcham
 VIC 3132, Australia
 Tel: +61 39874 5777
 Fax: +61 39874 5888
sales@appliedmeasurement.com.au
www.appliedmeasurement.com.au

BRAZIL

CAPI Controle e Automação Ltda
 Rua Itororó, 121, CEP 13466-240
 Americana-SP, Brazil
 Tel: +55 19 36047068
 Fax: +55 19 34681791
capi@capicontrole.com.br
www.capicontrole.com.br

CHILE

Verne SpA
 Apoquindo 2818, oficina 31
 Las Condes, Santiago, Chile
 Tel: +56 2 228858633
info@verne.cl
jsaavedra@verne.cl
www.verne.cl

CHINA

Beijing Gemston Mechanical & Electrical Equipment Co., Ltd
RAILWAY INSTRUMENTS ONLY
 Room 613, Anfu Mansion, Fengtai District, Beijing, China
 Tel: +86 10 6765 0516
 Fax: +86 10 6765 6966
 Mobile: +86 137 1755 1423
dh0526@163.com
www.baoft.cn

BELGIUM

Althen Sensors & Controls BV
 Verrijn Stuartlaan 40, 2288 EL,
 Rijswijk, Leidschendam
 The Netherlands
 Tel: +31 0 70 392 4421
 Tel: +31 0 61 396 7830
 Tel: +31 0 64 323 8393
sales@althen.nl
info@althen.nl
www.althensensors.com

BULGARIA

ASCO RAIL sp. z o.o.
EXCLUSIVE REPRESENTATIVE FOR RAILWAY EQUIPMENT
 ul. Wielowiejska 53, 44-120
 Pyskowice, Poland
 Tel: +48 32 230 45 70
 Fax: +48 32 233 21 34
biuro@ascorail.pl
export@ascorail.pl
www.ascorail.pl

CHINA

Beijing Haiwei Lutong Technology Co., Ltd
 Yard 1, Tianxing Street, Fangshan District, Beijing, China
 Tel: +86 10 8366 1866
 Fax: +86 10 8366 1866
info@haiwlt.com
www.haiwlt.com

CHINA

Xi'an Win-Success Automation Technology Co.,Ltd
 Room 3-1-1039, Iduhui Building, No.11 Tangyan South Road High-Tech Zone, Xi'an Shaanxi PRC, China
 Tel: +86 29 81106280
 Fax: +86 29 81106285
 Mob: +86 133 19271405
info@maxsenor.com
www.maxsensor.com

BOSNIA AND HERZEGOVINA

ASCO RAIL sp. z o.o.
EXCLUSIVE REPRESENTATIVE FOR RAILWAY EQUIPMENT
 ul. Wielowiejska 53, 44-120
 Pyskowice, Poland
 Tel: +48 32 230 45 70
 Fax: +48 32 233 21 34
biuro@ascorail.pl
export@ascorail.pl
www.ascorail.pl

CHILE

MOL INGENIERIA LTDA
EXCLUSIVE REPRESENTATIVE FOR RAILWAY EQUIPMENT
 República de Honduras 11936
 Las Condes, Santiago de Chile
 Tel: +56 9 59200362
hconcha@molingenieria.com
www.molingenieria.com

CHINA

Chongqing Wolf Industrial Technology Co., Ltd
 Room 2307 / 2308, Light of City international business building, No. 19 Jiangnan Avenue, Nan'an District, Chongqing, China
 Tel: 023 62832618
 Fax: 023 62832113
info@wolf-hk.com
www.wolf-hk.com

CHINA

Micron-Metrology co., Ltd
 No.2, Kecheng Rd., Industrial Park District, Suzhou, Jiangsu Province., China
 Tel: 0512 65589760
 Mob: +86 189 1806 9807
sales@micron-metrology.cn
www.micron-metrology.cn

CHINA

Zhenshangyou Technologies Co., Ltd
 Rm 2205-2210, Zhongyou Hotel
 1110 Nanshan Road, Nanshan
 District 518054 Shenzhen, China
 Tel: +86 755-26528100/8011/8012
 Fax: +86 755-26528210/26435640
info@51sensors.com
www.51sensors.com

CROATIA

ASCO RAIL sp. z o.o.
EXCLUSIVE REPRESENTATIVE FOR RAILWAY EQUIPMENT
 ul. Wielowiejska 53, 44-120
 Pyskowice, Poland
 Tel: +48 32 230 45 70
 Fax: +48 32 233 21 34
biuro@ascorail.pl
export@ascorail.pl
www.ascorail.pl

CZECH REPUBLIC

ASCO RAIL sp. z o.o.
EXCLUSIVE REPRESENTATIVE FOR RAILWAY EQUIPMENT
 ul. Wielowiejska 53, 44-120
 Pyskowice, Poland
 Tel: +48 32 230 45 70
 Fax: +48 32 233 21 34
biuro@ascorail.pl
export@ascorail.pl
www.ascorail.pl

DENMARK

BLConsult
 Ryssbält 294
 95 291 Kalix, Sweden
 Tel: +46 70 663 19 25
info@blconsult.se
www.blconsult.se

FINLAND

TERÄSPYÖRÄ-STEELWHEEL OY
RAILWAY INSTRUMENTS ONLY
 Juvan teollisuuskatu 28
 FI-02920 ESPOO, Finland
 Tel: +358 400 422 900
 Fax: +358 9 2511 5510
steelwheel@steelwheel.fi
www.teraspyora.fi

ESTONIA

FoodLab OÜ
 Haabersti linnaosa, Astangu tn 52
 13519 Eesti, Tallinn, Estonia
 Tel: +372 56 363110
foodlab.ee@gmail.com

FINLAND

Kvalitest Industrial AB
EXCEPT FOR RAILWAY INSTRUMENTS
 Ekbacksvägen 28,
 16869 Bromma, Sweden
 Tel: +46 0 76 525 5000
sales@kvalitest.com
www.kvalitest.com
www.kvalitest.se

GERMANY

Finger GmbH & Co. KG
OPTICAL MICROMETERS ONLY
 Sapelloh 172, 31606
 Warmen, Germany
 Tel: +49 5767 96020
 Fax: +49 5767 93004
finger@finger-kg.de
www.finger-kg.de

FRANCE

BLET Measurement Group S.A.S.
 1 avenue du Président Georges
 Pompidou, 92500 Rueil
 Malmaison, France
 Tel: +33 0 1 80 88 57 85
 Fax: +33 0 1 80 88 57 93
technique@blet-mesure.fr
www.blet-mesure.fr

GERMANY

Disynet GmbH
 Breyeller Str. 2, 41379
 Brueggen, Germany
 Tel: +49 2157 8799 0
 Fax: +49 2157 8799 22
disynet@sensoren.de
www.sensoren.de

INDIA

Influx Big Data Solutions Pvt Ltd
 No:2, Krishvi, Ground Floor,
 Old Airport Road, Domlur,
 Bangalore - 560071, India
 Tel: +91 73 37748490
 Tel: +91 94 48492380
milan@influxtechnology.com
support_india@influxtechnology.com
www.influxtechnology.com

GERMANY

ALTHEN GmbH Meß- und Sensortechnik
 Dieselstrasse 2, 65779
 Kelkheim, Germany
 Tel: +49 0 6195 7 00 60
info@althen.de
www.althensesors.com/de/

HUNGARY

ASCO RAIL sp. z o.o.
EXCLUSIVE REPRESENTATIVE FOR RAILWAY EQUIPMENT
 ul. Wielowiejska 53, 44-120
 Pyskowice, Poland
 Tel: +48 32 230 45 70
 Fax: +48 32 233 21 34
biuro@ascorail.pl
export@ascorail.pl
www.ascorail.pl

INDIA

Paragon Instrumentation Engineers Pvt. Ltd.
RAILWAY INSTRUMENTS ONLY
 200, Station Road,
 Roorkee, 247 667, India
 Tel: +91 1332 272394
tanuj@paragoninstruments.com
www.paragoninstruments.com

INDONESIA

PT. DHAYA BASWARA SANIYASA
 Botanic Junction Blok H-9 NO. 7
 Mega Kebon Jeruk, Joglo
 Jakarta, 11640, Indonesia
 Tel: +62 21 2932 5859
management@ptdbs.co.id

ISRAEL

Nisso Dekalo Import Export LTD
 1 David Hamelech Street
 Herzlia 46661 Israel
 Tel: +972 99577888
 Fax: +972 99568860
nissodekalotd@outlook.com
www.fly-supply.net
www.aircraft-partsupply.com

ITALY

FAE s.r.l.
 Via Tertulliano, 41
 20137 Milano, Italy
 Tel: +39 02 55187133
 Fax: +39 02 55187399
fae@fae.it
www.fae.it

JAPAN

Tokyo Instruments, Inc.
 6-18-14 Nishikasai, Edogawa-ku,
 Tokyo, 134-0088 Japan
 Tel: +81 3 3686 4711
 Fax: +81 3 3686 0831
f_kurabayashi@tokyoinst.co.jp
www.tokyoinst.co.jp

LATVIA

FoodLab OÜ
 Haabersti linnaosa, Astangu tn 52
 13519 Eesti, Tallinn, Estonia
 Tel: +372 56363110
foodlab.ee@gmail.com

LUXEMBOURG

Althen Sensors & Controls BV
 Verrijn Stuartlaan 40, 2288 EL,
 Rijswijk, Leidschendam
 The Netherlands
 Tel: +31 0 70 392 4421
 Tel: +31 0 61 396 7830
 Tel: +31 0 64 323 8393
sales@althen.nl
info@althen.nl
www.althensensors.com

MALAYSIA

OptoCom InstruVentures
 H-49-2, Jalan 5, Cosmoplex
 Industrial Park, Bandar Baru
 Salak Tinggi, Sepang, Malaysia
 Tel: 603 8706 6806
 Fax: 603 8706 6809
optocom@tm.net.my
www.optocom.com.my

MONTENEGRO

ASCO RAIL sp. z o.o.
EXCLUSIVE REPRESENTATIVE FOR RAILWAY EQUIPMENT
 ul. Wielowiejska 53, 44-120
 Pyskowice, Poland
 Tel: +48 32 230 45 70
 Fax: +48 32 233 21 34
biuro@ascorail.pl
export@ascorail.pl
www.ascorail.pl

NETHERLANDS

Althen Sensors & Controls BV
 Verrijn Stuartlaan 40, 2288 EL,
 Rijswijk, Leidschendam
 The Netherlands
 Tel: +31 0 70 392 4421
 Tel: +31 0 61 396 7830
 Tel: +31 0 64 323 8393
sales@althen.nl
info@althen.nl
www.althensensors.com

NORWAY

BLConsult
 Ryssbält 294,
 95 291 Kalix, Sweden
 Tel: +46 70 663 19 25
info@blconsult.se
www.blconsult.se

NORWAY

Salitec AS
 PB 468, N-1327
 Lysaker, Norway
 Tel: +47 23 891015
 Fax: +47 92101005
mail@salitec.no
www.salitec.no

PERU

Verne Perú S.A.C.
 Las Codornices 104,
 Surquillo, Lima, Peru
 Tel/fax: +51 992436734
info@verne.cl
www.verne.cl

POLAND

ASCO RAIL sp. z o.o.
EXCLUSIVE REPRESENTATIVE FOR RAILWAY EQUIPMENT
 ul. Wielowiejska 53, 44-120
 Pyskowice, Poland
 Tel: +48 32 230 45 70
 Fax: +48 32 233 21 34
biuro@ascorail.pl
export@ascorail.pl
www.ascorail.pl

POLAND

RIFTEK EUROPE sp. z o.o.
 ul. Domaniewska 17/19, 02-672
 Warsaw, Poland
info@riftek.com
www.riftek.com

PORTUGAL

Campal Inovacoes Ferroviarias Lda.
 Lagoas Park, Edifício 7, 1º Piso
 Sul, 2740-244 Porto Salvo, Oeiras,
 Portugal
 Tel: +351 21 584 4348
campal@campal.pt
www.campal.pt

SERBIA

ASCO RAIL sp. z o.o.
EXCLUSIVE REPRESENTATIVE FOR RAILWAY EQUIPMENT
 ul. Wielowiejska 53, 44-120
 Pyskowice, Poland
 Tel: +48 32 230 45 70
 Fax: +48 32 233 21 34
biuro@ascorail.pl
export@ascorail.pl
www.ascorail.pl

SLOVAKIA

ASCO RAIL sp. z o.o.
**EXCLUSIVE REPRESENTATIVE
FOR RAILWAY EQUIPMENT**
 ul. Wielowiejska 53, 44-120
 Pyskowice, Poland
 Tel: +48 32 230 45 70
 Fax: + 48 32 233 21 34
biuro@ascorail.pl
export@ascorail.pl
www.ascorail.pl

SLOVENIA

ASCO RAIL sp. z o.o.
**EXCLUSIVE REPRESENTATIVE
FOR RAILWAY EQUIPMENT**
 ul. Wielowiejska 53, 44-120
 Pyskowice, Poland
 Tel: +48 32 230 45 70
 Fax: + 48 32 233 21 34
biuro@ascorail.pl
export@ascorail.pl
www.ascorail.pl

SOUTH KOREA

BS Holdings
 B-201,Wonpogongwon 1ro,
 59 Danwon-gu, Ansan-si,
 Gyeonggi-do 15455, Republic of
 Korea
 Tel: +82 31 411 5011
 Fax: +82 31 411 5015
bsh5011@hanmail.net
www.lasersolution.co.kr

SOUTH KOREA

PROSEN. CO., LTD
 M-1001, Songdo techno park IT
 center, 32, Songdogwahak-ro,
 Yeonsu-gu, Incheon, 21984,
 Republic of Korea
 Tel: +82 32 811 3457
 Fax: +82 32 232 7458
trade@prosen.co.kr
www.prosen.co.kr

SPAIN

IBERFLUID Instruments S.A.
 C/ Botanica, 122, 08908
 L'Hospitalet de Llobregat
 Barcelona
 Tel: +34 93 447 10 65
 Fax: +34 93 334 05 24
myct@iberfluid.com
www.iberfluid.com

SWEDEN

BLConsult
 Ryssbält 294,
 95 291 Kalix, Sweden
 Tel: +46 70 663 19 25
info@blconsult.se
www.blconsult.se

SWEDEN

Kvalitest Industrial AB
**EXCEPT FOR RAILWAY
INSTRUMENTS**
 Ekbacksvägen 28,
 16869 Bromma, Sweden
 Tel: +46 0 76 525 5000
sales@kvalitest.com
www.kvalitest.com
www.kvalitest.se

SWITZERLAND

ID&T GmbH
 Gewerbestrasse 12/a
 8132 Egg (Zurich), Switzerland
 Tel: + 41 44 994 92 32
 Fax: + 41 44 994 92 34
info@idtlaser.com
www.idtlaser.com

THAILAND

Advantech Solution Co., Ltd.
 20/170 Motorway Rd.,
 Kwang Pravet, Khet Pravet,
 Bangkok, Thailand 10250
 Tel: +662 1848705
 Fax: +662 1848708
sales@advantechsolution.com
www.advantechsolution.com

TURKEY

**MAK Elektronik Malzeme
Analiz ve Kalite Kontrol
Cihazlari Dis Tic. Ltd. Sti.**
 Cenap Sahabettin Sokak, No:39,
 34718 Kosuyolu - Kadikoy /
 Istanbul - TURKEY
 Tel: +90 216 402 10 34
 Fax: +90 216 402 10 35
ulastac@metalografi.net
www.makelektronik.com.tr

TURKEY

TEKMA Mühendislik A.S.
 Cevizli Mh. M. Kemal Cd.,
 Hukukçular Towers,
 A-Blok, No: 66-A/39
 Kartal - İstanbul
 Tel: +90 216 970 1318
 Tel: +90 850 840 2334
info@tekma.eu
www.tekma.eu

UKRAINE

KODA
 Frunze st. 22, 61002,
 Harkov, Ukraine
 Tel/Fax: +38 057 714 26 54
mail@koda.com.ua
www.koda.com.ua

**UNITED KINGDOM,
IRELAND**

Althen UK
 Northamptonshire
 United Kingdom
 Tel: +44 0 7823 921427
t.stoyles@althen.co.uk
www.althensensors.com
www.althencontrols.com

USA

Althen Sensors & Controls
 2531 Bradley St., Oceanside, CA,
 92056, USA
 Tel: 858 633 3572
r.ream@althensensors.com

USA, CANADA, MEXICO

**Acuity Products of Schmitt
Industries, Inc.**
 2765 NW Nicolai Street
 Portland, OR, 97210, USA
 Tel: +1 503 227 7908
 Fax: +1 503 223 1258
sales@acuitylaser.com
www.acuitylaser.com

USA, CANADA, MEXICO

**International Electronic
Machines Corporation**

RAILWAY INSTRUMENTS ONLY

850 River Street, Troy,
New York, USA

Tel: +1 518 268-1636

Fax: +1 518 268-1639

marketing@iem.net

wwwиемнет

18