




RIFTEK

Sensors & Instruments

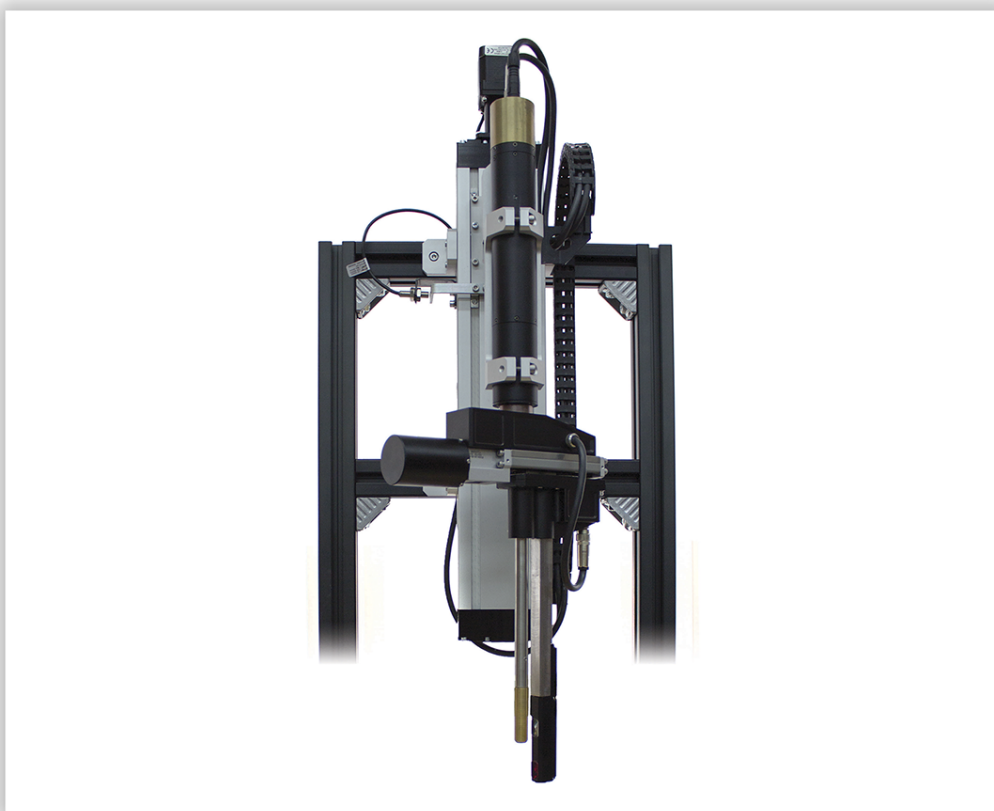

LAMINATED TUBES GEOMETRY MEASUREMENT SYSTEM

RF092-13/50 Series

User's manual

www.riftek.com
info@riftek.com

Contents

1. Safety precautions.....	3
2. CE compliance.....	3
3. Laser safety.....	3
4. General information.....	3
5. Basic technical data.....	4
6. Example of item designation when ordering.....	4
7. Structure and operational principle.....	5
8. Connection.....	6
8.1. Ethernet cable.....	6
8.2. Cable for motor and limit switch.....	7
9. Network setting.....	7
10. Indended use.....	8
10.1. Preparation for use.....	8
10.1.1. Visual inspection.....	8
10.1.2. Installation and connection.....	8
10.1.3. Switching the system.....	8
10.1.4. Calibration.....	8
10.2. Operating the system.....	8
11. Software.....	8
11.1. System requirements.....	8
11.2. SDK library.....	9
12. Warranty policy.....	9
13. Revisions.....	9
14. Distributors.....	10

1. Safety precautions

- Use supply voltage and interfaces indicated in the system specifications.
- In connection/disconnection of cables, the system power must be switched off.
- Do not use the system in locations close to powerful light sources.
- The system must be grounded.


2. CE compliance

The system has been developed for use in industry and meets the requirements of the following Directives:

- EU directive 2014/30/EU. Electromagnetic compatibility (EMC).
- EU directive 2011/65/EU, “RoHS” category 9.

3. Laser safety

The sensors make use of a c.w. 660 nm and 405 nm wavelength semiconductor lasers. Maximum output power is 4.8 mW. The sensors belong to the 3R laser safety class according to IEC/EN 60825-1:2014. The following warning label is placed on the sensor body:

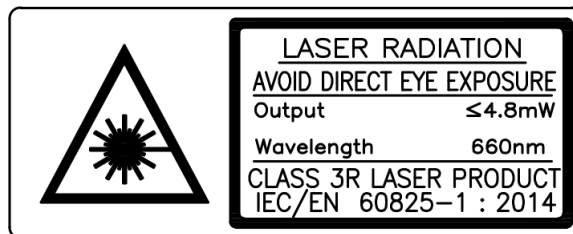

The following safety measures should be taken while operating the system:

- Do not target a laser beam to humans.
- Avoid staring into a laser beam through optical instruments.
- Mount the system so that a laser beam is positioned above or below the eyes level.
- Use protective goggles when operating the system.
- Avoid staring into a laser beam.
- Do not disassemble the sensors.

4. General information

The system is designed for contactless scanning and geometrical parameters measurement of laminated tubes, made of PBL and ABL foil.

The system calculates the following parameters:

- tube length;
- average outer diameter;
- maximum outer diameter;
- average foil thickness;
- average foil thickness at tube seam;
- seam width.

5. Basic technical data

Parameter		Value
Diameter measurement range		13...50 mm
Diameter measurement accuracy		±10 µm
Foil thickness range		0,05...0,5 mm
Foil and weld thickness measurement accuracy		±5 µm
Tube length measurement accuracy		±0,1 mm
Light source		red semiconductor laser, 660 nm wavelength
		blue semiconductor laser, 405 nm wavelength
Output power		<5 mW
Laser safety class		3R (IEC/EN 60825-1:2014)
Output interface		Ethernet
Power supply		24 V DC
Power consumption		<30 W
Environmental resistance	Vibration	20 g / 10...1000 Hz, 6 hours for each of XYZ axes
	Shock	30 g / 6 ms
	Permissible ambient light	30000 lx
	Relative humidity	5-95 % (no condensation)
	Operating ambient temperature	0...+45°C
	Storage temperature	-20...+70°C
Housing material		aluminum
Weight (without cable)		8000 gram

NOTE. Technical characteristics of the system can be changed for a specific task.

6. Example of item designation when ordering

RF092-Dmin/Dmax

Symbol	Description
Dmin	Minimum measurement diameter, mm
Dmax	Maximum measurement diameter, mm

Example: RF092-13/50 – Laminated Tubes Geometry Measurement System RF092, diameter measurement range - 13...50 mm

7. Structure and operational principle

The system structure is shown in Figure 1:

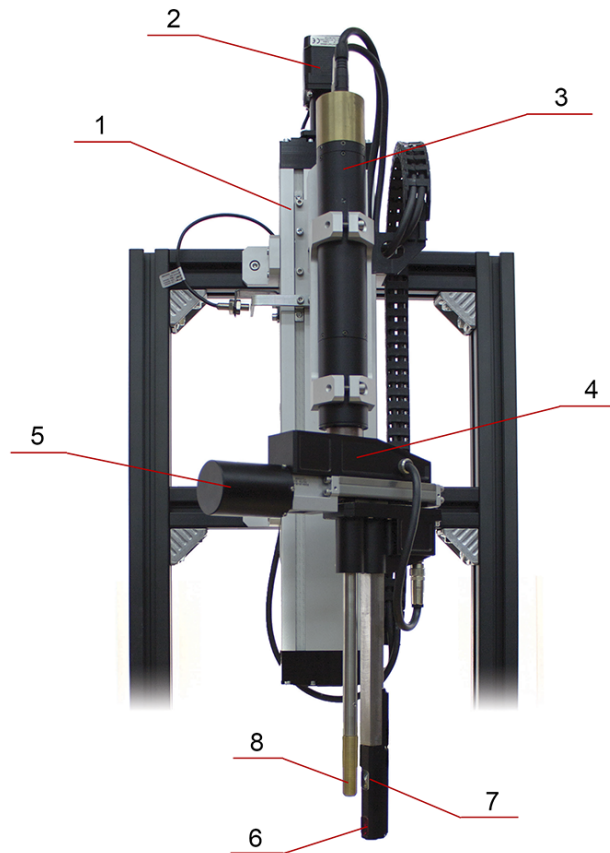


Figure 1. The system structure

Linear translation stage 1 with stepper motor 2 carries rotation module 3 with in-built motor and encoder (not shown). Multi-position linear translation module 4 with motor 5 is placed on the rotation module. Module 4 carries three triangulation laser sensors 6-8. Laser sensor 8 is intended for scanning of tube inner surface, laser sensors 6 and 7 are intended for scanning of tube outer surface. Measurement lines of sensors 7 and 8 are aligned. To eliminate the influence of sensors on each other under control of semi-transparent films, sensor 7 contains a blue laser and sensor 8 – a red one.

The system operates as follows.

The tube (not shown) is placed in the measurement position under laser sensors by such a way that the tube axis coincide with rotation axis of rotation module 3.

To get required accuracy, the measurement range of laser sensors must not exceed 9 mm. Depending on the tube diameter, module 4 places sensors in the required control position.

Linear translation stage 1 lets down laser sensors. During the translation, sensor 6 determines the tube edge position (it is a start of tube length measurement) and then sensors 7, 8 determine the same edge.

After registration of tube upper edge, linear translation stage 1 lets down laser sensors and sensor 6 measures the tube length. The system translates sensors into position of tube shape control (10 mm from the edge).

Module 3 rotates module 4 with sensors. Sensors measure distances to tube inner and outer surfaces. The data are transmitted to PC where foil thickness, weld parameters and tube shape are calculated.

Sensors are raised to upper position and measurement cycle repeats for the next tube.

Overall and mounting dimensions are shown in Figure 2.


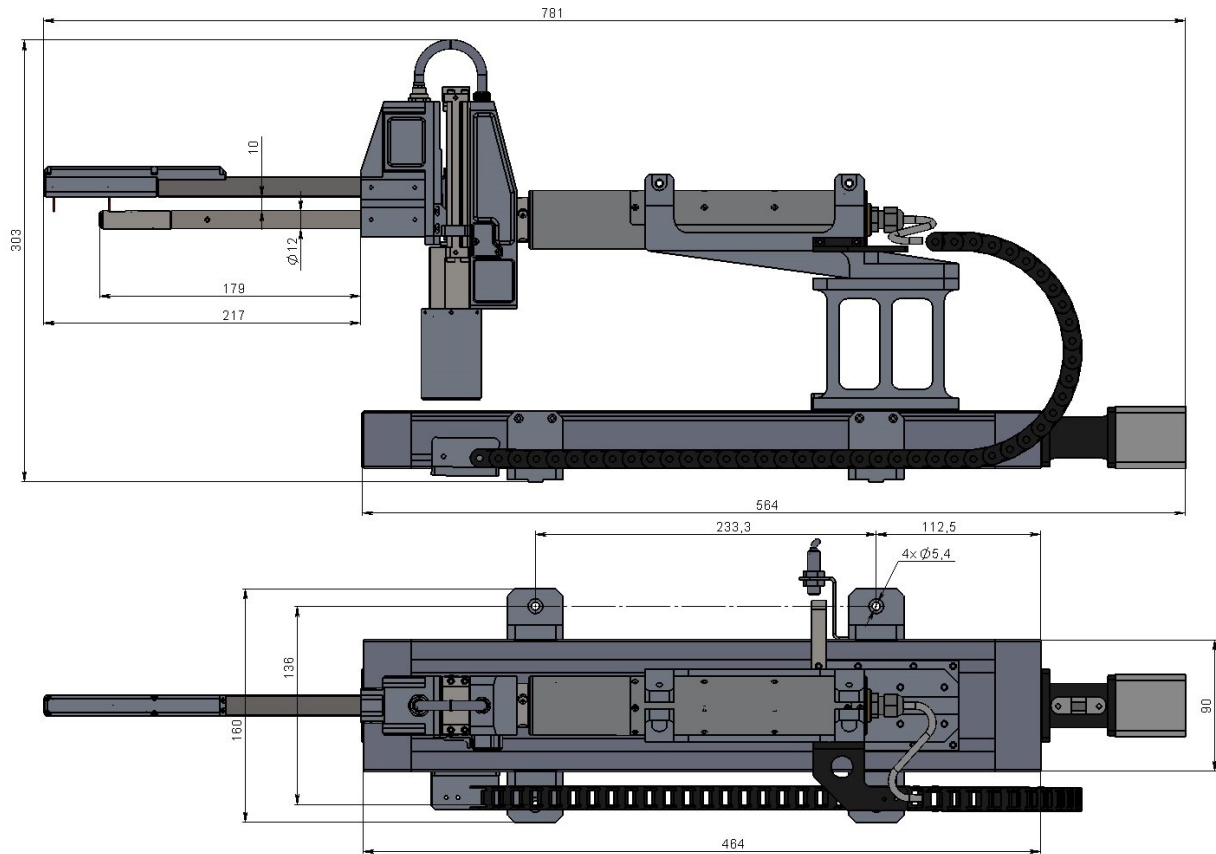


Figure 2. Overall and mounting dimensions

8. Connection

8.1. Ethernet cable

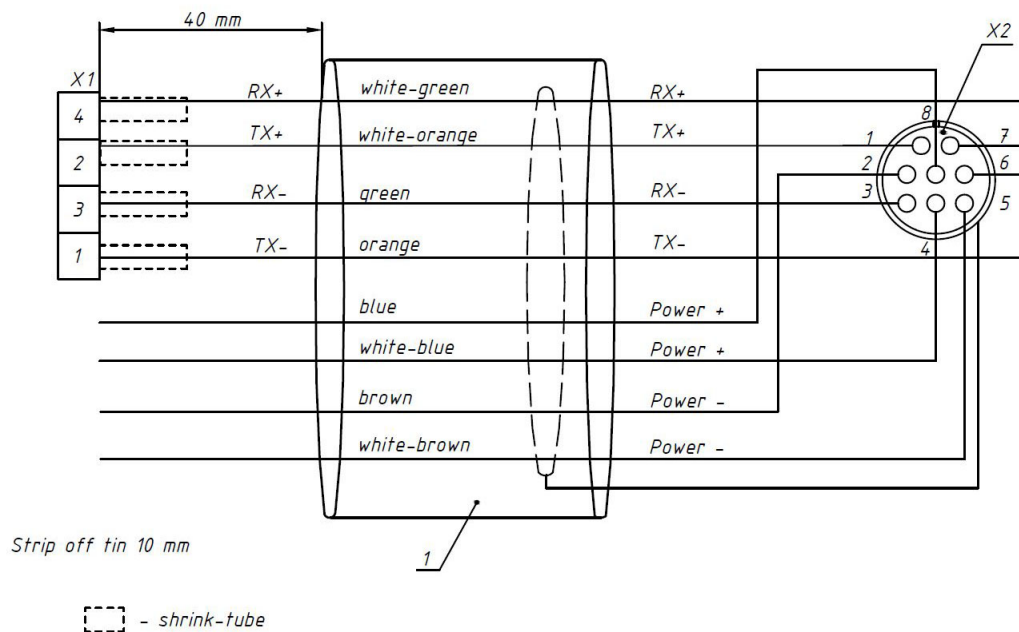

Designations:


X1	B4B-ZR
X2	BINDER 09 0426 10 08
1	LAPP CABLE ETHERLINE FD P BK CAT.5e

Assignment:

Pin number	Assignment	Wire color	Note
1	TX+	White-orange	Transmit data Ethernet +
6	TX-	Orange	Transmit data Ethernet -
7	RX+	White-green	Receive data Ethernet +
3	RX-	Green	Receive data Ethernet -
8	Power+	Blue	Power supply: 24 V DC Power consumption: <30 W
4	Power+	White-blue	
2	Power-	Brown	
5	Power-	White-brown	

7

8.2. Cable for motor and limit switch

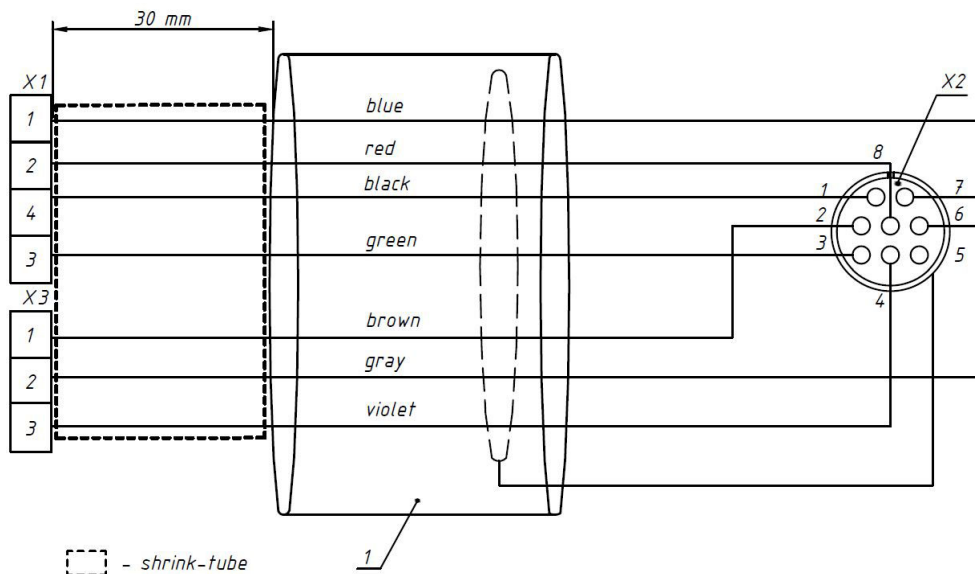

Designations:

X1	B4B-Zr
X2	BINDER 620 99 9225 00 08
X3	B3B-ZR
1	ÖLFLEX ROBOT 900 DP 12x0.14

9. Network setting

All systems are shipped with the following default network configuration: IP address of the system – 192.168.0.3.

Configure your PC's network card in the following address space: 192.168.0.X. Connect system directly to PC or through network switch.

10. Intended use

10.1. Preparation for use

The preparation involves the following steps:

- Visual inspection.
- Installation and connection.
- Switching the system.
- Calibration.

10.1.1. Visual inspection

- Check the system for completeness and absence of damage.
- Check the cables and ground wire.
- Check the condition of output windows and, if necessary, wipe them with a soft cloth.

10.1.2. Installation and connection

- Install the system.
- Make electrical connections (see Par. [8](#)).

10.1.3. Switching the system

Feed power to the system – 24 V DC.

10.1.4. Calibration

The calibration procedure must be performed for each type of tubes to be measured.

In order to perform the calibration, place the tube into the control position and start the calibration using your software application. After successful calibration, place the tube of another type and perform the same procedure. Calibration data are written to the file **cbrdb.ini**.

**ATTENTION!**

The calibration procedure must be repeated every month.

10.2. Operating the system

The measurement process is fully automated and operation of the system is reduced to the work with the software.

11. Software

The provided software includes the SDK library that allows to develop software applications according to specific tasks.

11.1. System requirements

- Operating system Windows 7 and later.
- Microsoft Visual C++ Runtime Redistributable for Windows 64-bit. Shipped with the package (you need to run **vcredist_x64.exe**).

11.2. SDK library

Class name: **rf096112**.

Description of class members:

Setup(remote_ip, remote_port, local_port, local_port) Set network parameters. Must be called before connecting to the device. Returns: void. Normal parameters: b"192.168.0.3", 6008, 6004 (customizable).
Connect() Try to connect and read the device parameters stored in flash. Returns: boolean; "True" on success.
Disconnect() Close connection sockets. Returns: void.
Calibrate(sampleName) Run the calibration procedure. sampleName: a name of calibration sample. Calibration samples data are stored in "cbrdb.ini" file. On success, the calibration values are stored to "cbrdb.ini" file to appropriate section. On failure, returns "False" and moves the system to the park state. Returns: boolean; "True" on success.
Measure(pos, results, angle) Run the measurement procedure. pos: a nominal diameter of tube in millimeters (c_float). results: a pointer to the results array, (c_float*6)(). angle: starting measurement angle in encoder step units (10..8192). On failure, returns "False" and moves the system to the park state. Returns: boolean; "True" on success.
Park() Return system mechanical parts to their initial positions (move carriage to top, remove calibration pad). Returns: boolean; "True" on success. Warning: function returns without waiting for all movements finished.
Check() Performs the hardware check. Returns: c_uchar Result is a byte containing 1's for parts passed its test according to the table: Bit 0: Linear motion motor Bit 1: Calibration pad Bit 2: Laser control Bit 3: Angular motion Bit 4: Carriage positioning So if all tests are passed, the result value is 31 dec (00011111 bin).

12. Warranty policy

Warranty assurance for the Laminated Tubes Geometry Measurement System RF092-13/50 Series – 24 months from the date of putting in operation; warranty shelf-life – 12 months.

13. Revisions

Date	Revision	Description
29.09.2017	1.0.0	Starting document.

14. Distributors

AUSTRALIA

**Applied Measurement
Australia Pty Ltd**
RAILWAY INSTRUMENTS ONLY
 Thornton Plaza, Unit 5,
 27 Thornton Crescent, Mitcham
 VIC 3132, Australia
 Tel: +61 39874 5777
 Fax: +61 39874 5888
sales@appliedmeasurement.com.au
www.appliedmeasurement.com.au

BRAZIL

**CAPI Controle
e Automação Ltda**
 Rua Itororó, 121, CEP 13466-240
 Americana-SP, Brazil
 Tel: +55 19 36047068
 Fax: +55 19 34681791
capi@capicontrol.com.br
www.capicontrol.com.br

CHILE

Verne SpA
 Apoquindo 2818, oficina 31
 Las Condes, Santiago, Chile
 Tel: +56 2 228858633
info@verne.cl
jsaavedra@verne.cl
www.verne.cl

CHINA

**Beijing Gemston Mechanical
& Electrical Equipment Co.,
Ltd**
RAILWAY INSTRUMENTS ONLY
 Room 613, Anfu Mansion, Fengtai
 District, Beijing, China
 Tel: +86 10 6765 0516
 Fax: +86 10 6765 6966
 Mobile: +86 137 1755 1423
dh0526@163.com
www.baoft.cn

BELGIUM

**Althen Sensors & Controls
BV**
 Verrijn Stuartlaan 40, 2288 EL,
 Rijswijk, Leidschendam
 The Netherlands
 Tel: +31 0 70 392 4421
 Tel: +31 0 61 396 7830
 Tel: +31 0 64 323 8393
sales@althen.nl
info@althen.nl
www.althensensors.com

BULGARIA

ASCO RAIL sp. z o.o.
**EXCLUSIVE REPRESENTATIVE
FOR RAILWAY EQUIPMENT**
 ul. Wielowiejska 53, 44-120
 Pyskowice, Poland
 Tel: +48 32 230 45 70
 Fax: +48 32 233 21 34
biuro@ascorail.pl
export@ascorail.pl
www.ascorail.pl

CHINA

**Beijing Haiwei Lutong
Technology Co., Ltd**
 Yard 1, Tianxing Street, Fangshan
 District, Beijing, China
 Tel: +86 10 8366 1866
 Fax: +86 10 8366 1866
info@haiwlt.com
www.haiwlt.com

CHINA

**Xi'an Win-Success
Automation Technology
Co.,Ltd**
 Room 3-1-1039, Iduhui Building,
 No.11 Tangyan South Road
 High-Tech Zone, Xi'an
 Shaanxi PRC, China
 Tel: +86 29 81106280
 Fax: +86 29 81106285
 Mob: +86 133 19271405
info@maxsenor.com
www.maxsensor.com

BOSNIA AND HERZEGOVINA

ASCO RAIL sp. z o.o.
**EXCLUSIVE REPRESENTATIVE
FOR RAILWAY EQUIPMENT**
 ul. Wielowiejska 53, 44-120
 Pyskowice, Poland
 Tel: +48 32 230 45 70
 Fax: +48 32 233 21 34
biuro@ascorail.pl
export@ascorail.pl
www.ascorail.pl

CHILE

MOL INGENIERIA LTDA
**EXCLUSIVE REPRESENTATIVE
FOR RAILWAY EQUIPMENT**
 República de Honduras 11936
 Las Condes, Santiago de Chile
 Tel: +56 9 59200362
hconcha@molingenieria.com
www.molingenieria.com

CHINA

**Chongqing Wolf Industrial
Technology Co., Ltd**
 Room 2307 / 2308, Light of City
 international business building,
 No. 19 Jiangnan Avenue, Nan'an
 District, Chongqing, China
 Tel: 023 62832618
 Fax: 023 62832113
info@wolf-hk.com
www.wolf-hk.com

CHINA

Micron-Metrology co., Ltd
 No.2, Kecheng Rd., Industrial Park
 District, Suzhou,
 Jiangsu Province., China
 Tel: 0512 65589760
 Mob: +86 189 1806 9807
sales@micron-metrology.cn
www.micron-metrology.cn

CHINA**Zhenshangyou Technologies Co., Ltd**

Rm 2205-2210, Zhongyou Hotel
 1110 Nanshan Road, Nanshan
 District 518054 Shenzhen, China
 Tel: +86 755-26528100/8011/8012
 Fax: +86 755-26528210/26435640
info@51sensors.com
www.51sensors.com

CROATIA**ASCO RAIL sp. z o.o.**
EXCLUSIVE REPRESENTATIVE FOR RAILWAY EQUIPMENT

ul. Wielowiejska 53, 44-120
 Pyskowice, Poland
 Tel: +48 32 230 45 70
 Fax: +48 32 233 21 34
biuro@ascorail.pl
export@ascorail.pl
www.ascorail.pl

CZECH REPUBLIC**ASCO RAIL sp. z o.o.**
EXCLUSIVE REPRESENTATIVE FOR RAILWAY EQUIPMENT

ul. Wielowiejska 53, 44-120
 Pyskowice, Poland
 Tel: +48 32 230 45 70
 Fax: +48 32 233 21 34
biuro@ascorail.pl
export@ascorail.pl
www.ascorail.pl

DENMARK**BLConsult**

Ryssbält 294
 95 291 Kalix, Sweden
 Tel: +46 70 663 19 25
info@blconsult.se
www.blconsult.se

ESTONIA**FoodLab OÜ**

Haabersti linnaosa, Astangu tn 52
 13519 Eesti, Tallinn, Estonia
 Tel: +372 56 363110
foodlab.ee@gmail.com

FINLAND**Kvalitest Industrial AB**
EXCEPT FOR RAILWAY INSTRUMENTS

Ekbacksvägen 28,
 16869 Bromma, Sweden
 Tel: +46 0 76 525 5000
sales@kvalitest.com
www.kvalitest.com
www.kvalitest.se

FINLAND**TERÄSPYÖRÄ-STEELWHEEL OY****RAILWAY INSTRUMENTS ONLY**

Juvan teollisuuskatu 28
 FI-02920 ESPOO, Finland
 Tel: +358 400 422 900
 Fax: +358 9 2511 5510
steelwheel@steelwheel.fi
www.teraspysora.fi

FRANCE**BLET Measurement Group S.A.S.**

1 avenue du Président Georges
 Pompidou, 92500 Rueil
 Malmaison, France
 Tel: +33 0 1 80 88 57 85
 Fax: +33 0 1 80 88 57 93
technique@blet-mesure.fr
www.blet-mesure.fr

GERMANY**Disynet GmbH**

Breyeller Str. 2, 41379
 Brueggen, Germany
 Tel: +49 2157 8799 0
 Fax: +49 2157 8799 22
disynet@sensoren.de
www.sensoren.de

GERMANY**Finger GmbH & Co. KG**
OPTICAL MICROMETERS ONLY

Sapelloh 172, 31606
 Warmen, Germany
 Tel: +49 5767 96020
 Fax: +49 5767 93004
finger@finger-kg.de
www.finger-kg.de

GERMANY**ALTHEN GmbH Meß- und Sensortechnik**

Dieselstrasse 2, 65779
 Kelkheim, Germany
 Tel: +49 0 6195 7 00 60
info@althen.de
www.althensensors.com/de/

HUNGARY**ASCO RAIL sp. z o.o.**
EXCLUSIVE REPRESENTATIVE FOR RAILWAY EQUIPMENT

ul. Wielowiejska 53, 44-120
 Pyskowice, Poland
 Tel: +48 32 230 45 70
 Fax: +48 32 233 21 34
biuro@ascorail.pl
export@ascorail.pl
www.ascorail.pl

INDIA**Influx Big Data Solutions Pvt Ltd**

No:2, Krishvi, Ground Floor,
 Old Airport Road, Domlur,
 Bangalore - 560071, India
 Tel: +91 73 37748490
 Tel: +91 94 48492380
milan@influxtechnology.com
support_india@influxtechnology.com
www.influxtechnology.com

INDIA**Paragon Instrumentation Engineers Pvt. Ltd.****RAILWAY INSTRUMENTS ONLY**

200, Station Road,
 Roorkee, 247 667, India
 Tel: +91 1332 272394
tanuj@paragoninstruments.com
www.paragoninstruments.com

INDONESIA**PT. DHAYA BASWARA SANIYASA**

Botanic Junction Blok H-9 NO. 7
 Mega Kebon Jeruk, Joglo
 Jakarta, 11640, Indonesia
 Tel: +62 21 2932 5859
management@ptdbs.co.id

ISRAEL

Nisso Dekalo Import Export LTD

1 David Hamelech Street
 Herzlia 46661 Israel
 Tel: +972 99577888
 Fax: +972 99568860
nissodekaloltd@outlook.com
www.fly-supply.net
www.aircraft-partsupply.com

LATVIA

FoodLab OÜ

Haabersti linnaosa, Astangu tn 52
 13519 Eesti, Tallinn, Estonia
 Tel: +372 56363110
foodlab.ee@gmail.com

MONTENEGRO

ASCO RAIL sp. z o.o. EXCLUSIVE REPRESENTATIVE FOR RAILWAY EQUIPMENT

ul. Wielowiejska 53, 44-120
 Pyskowice, Poland
 Tel: +48 32 230 45 70
 Fax: + 48 32 233 21 34
biuro@ascorail.pl
export@ascorail.pl
www.ascorail.pl

NORWAY

Salitec AS

PB 468, N-1327
 Lysaker, Norway
 Tel: +47 23 891015
 Fax: +47 92101005
mail@salitec.no
www.salitec.no

POLAND

RIFTEK EUROPE sp. z o.o.

ul. Domaniewska 17/19, 02-672
 Warsaw, Poland
info@riftek.com
www.riftek.com

ITALY

FAE s.r.l.

Via Tertulliano, 41
 20137 Milano, Italy
 Tel: +39 02 55187133
 Fax: +39 02 55187399
fae@fae.it
www.fae.it

LUXEMBOURG

Althen Sensors & Controls BV

Verrijn Stuartlaan 40, 2288 EL,
 Rijswijk, Leidschendam
 The Netherlands
 Tel: +31 0 70 392 4421
 Tel: +31 0 61 396 7830
 Tel: +31 0 64 323 8393
sales@althen.nl
info@althen.nl
www.althensensors.com

NETHERLANDS

Althen Sensors & Controls BV

Verrijn Stuartlaan 40, 2288 EL,
 Rijswijk, Leidschendam
 The Netherlands
 Tel: +31 0 70 392 4421
 Tel: +31 0 61 396 7830
 Tel: +31 0 64 323 8393
sales@althen.nl
info@althen.nl
www.althensensors.com

PERU

Verne Perú S.A.C.

Las Codornices 104,
 Surquillo, Lima, Peru
 Tel/fax: +51 992436734
info@verne.cl
www.verne.cl

PORTUGAL

Campal Inovacoes Ferroviarias Lda.

Lagoas Park, Edificio 7, 1° Piso
 Sul, 2740-244 Porto Salvo, Oeiras,
 Portugal
 Tel: +351 21 584 4348
campal@campal.pt
www.campal.pt

JAPAN

Tokyo Instruments, Inc.

6-18-14 Nishikasai, Edogawa-ku,
 Tokyo, 134-0088 Japan
 Tel: +81 3 3686 4711
 Fax: +81 3 3686 0831
f_kuribayashi@tokyoinst.co.jp
www.tokyoinst.co.jp

MALAYSIA

OptoCom InstruVentures

H-49-2, Jalan 5, Cosmoplex
 Industrial Park, Bandar Baru
 Salak Tinggi, Sepang, Malaysia
 Tel: 603 8706 6806
 Fax: 603 8706 6809
optocom@tm.net.my
www.optocom.com.my

NORWAY

BLConsult

Ryssbält 294,
 95 291 Kalix, Sweden
 Tel: +46 70 663 19 25
info@blconsult.se
www.blconsult.se

POLAND

ASCO RAIL sp. z o.o. EXCLUSIVE REPRESENTATIVE FOR RAILWAY EQUIPMENT

ul. Wielowiejska 53, 44-120
 Pyskowice, Poland
 Tel: +48 32 230 45 70
 Fax: + 48 32 233 21 34
biuro@ascorail.pl
export@ascorail.pl
www.ascorail.pl

SERBIA

ASCO RAIL sp. z o.o. EXCLUSIVE REPRESENTATIVE FOR RAILWAY EQUIPMENT

ul. Wielowiejska 53, 44-120
 Pyskowice, Poland
 Tel: +48 32 230 45 70
 Fax: + 48 32 233 21 34
biuro@ascorail.pl
export@ascorail.pl
www.ascorail.pl

SLOVAKIA
ASCO RAIL sp. z o.o.
EXCLUSIVE REPRESENTATIVE
FOR RAILWAY EQUIPMENT

ul. Wielowiejska 53, 44-120
 Pyskowice, Poland
 Tel: +48 32 230 45 70
 Fax: +48 32 233 21 34
biuro@ascorail.pl
export@ascorail.pl
www.ascorail.pl

SLOVENIA
ASCO RAIL sp. z o.o.
EXCLUSIVE REPRESENTATIVE
FOR RAILWAY EQUIPMENT

ul. Wielowiejska 53, 44-120
 Pyskowice, Poland
 Tel: +48 32 230 45 70
 Fax: +48 32 233 21 34
biuro@ascorail.pl
export@ascorail.pl
www.ascorail.pl

SOUTH KOREA**BS Holdings**

B-201, Wonpogongwon 1ro,
 59 Danwon-gu, Ansan-si,
 Gyeonggi-do 15455, Republic of
 Korea
 Tel: +82 31 411 5011
 Fax: +82 31 411 5015
bsh5011@hanmail.net
www.lasersolution.co.kr

SOUTH KOREA**PROSEN. CO., LTD**

M-1001, Songdo techno park IT
 center, 32, Songdogwahak-ro,
 Yeonsu-gu, Incheon, 21984,
 Republic of Korea
 Tel: +82 32 811 3457
 Fax: +82 32 232 7458
trade@prosen.co.kr
www.prosen.co.kr

SPAIN**IBERFLUID Instruments S.A.**

C/ Botanica, 122, 08908
 L'Hospitalet de Llobregat
 Barcelona
 Tel: +34 93 447 10 65
 Fax: +34 93 334 05 24
myct@iberfluid.com
www.iberfluid.com

SWEDEN**BLConsult**

Ryssbält 294,
 95 291 Kalix, Sweden
 Tel: +46 70 663 19 25
info@blconsult.se
www.blconsult.se

SWEDEN
Kvalitest Industrial AB
EXCEPT FOR RAILWAY
INSTRUMENTS

Ekbacksvägen 28,
 16869 Bromma, Sweden
 Tel: +46 0 76 525 5000
sales@kvalitest.com
www.kvalitest.com
www.kvalitest.se

SWITZERLAND**ID&T GmbH**

Gewerbestrasse 12/a
 8132 Egg (Zurich), Switzerland
 Tel: +41 44 994 92 32
 Fax: +41 44 994 92 34
info@idtlaser.com
www.idtlaser.com

THAILAND**Advantech Solution Co., Ltd.**

20/170 Motorway Rd.,
 Kwang Pravat, Khet Pravat,
 Bangkok, Thailand 10250
 Tel: +662 1848705
 Fax: +662 1848708
sales@advantechsolution.com
www.advantechsolution.com

TURKEY
MAK Elektronik Malzeme
Analiz ve Kalite Kontrol
Cihazlari Dis Tic. Ltd. Sti.

Cenap Sahabettin Sokak, No:39,
 34718 Kosuyolu - Kadikoy /
 Istanbul - TURKEY
 Tel: +90 216 402 10 34
 Fax: +90 216 402 10 35
ulastac@metalografi.net
www.makelektronik.com.tr

TURKEY**TEKMA Mühendislik A.S.**

Cevizli Mh. M. Kemal Cd.,
 Hukukçular Towers,
 A-Blok, No: 66-A/39
 Kartal - Istanbul
 Tel: +90 216 970 1318
 Tel: +90 850 840 2334
info@tekma.eu
www.tekma.eu

UKRAINE**KODA**

Frunze st. 22, 61002,
 Harkov, Ukraine
 Tel/Fax: +38 057 714 26 54
mail@koda.com.ua
www.koda.com.ua

**UNITED KINGDOM,
IRELAND****Althen UK**

Northamptonshire
 United Kingdom
 Tel: +44 0 7823 921427
t.stoyles@althen.co.uk
www.althensensors.com
www.althencontrols.com

USA**Althen Sensors & Controls**

2531 Bradley St., Oceanside, CA,
 92056, USA
 Tel: 858 633 3572
r.ream@althensensors.com

USA, CANADA, MEXICO
Acuity Products of Schmitt
Industries, Inc.

2765 NW Nicolai Street
 Portland, OR, 97210, USA
 Tel: +1 503 227 7908
 Fax: +1 503 223 1258
sales@acuitylaser.com
www.acuitylaser.com

USA, CANADA, MEXICO

**International Electronic
Machines Corporation**

RAILWAY INSTRUMENTS ONLY

850 River Street, Troy,
New York, USA

Tel: +1 518 268-1636

Fax: +1 518 268-1639

marketing@iem.net

www.iem.net